

# INSTALLATION & OPERATING INSTRUCTIONS

## Raytherm<sup>®</sup> Residential Boilers



**Models 0042B, 0066B, 0090B  
0135B & 0180B – Type H**



**WARNING:** If these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

**FOR YOUR SAFETY:** Do not store or use gasoline or other flammable vapors and liquids or other combustible materials in the vicinity of this or any other appliance. To do so may result in an explosion or fire.

**WHAT TO DO IF YOU SMELL GAS:**

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

This manual should be maintained in legible condition and kept adjacent to the heater or in another safe place for future reference.

**Raypak<sup>®</sup>**  
A Rheem<sup>®</sup> Company

**Revision 35 reflects the following changes:**  
Removed California Proposition 65 warning on page 4.

---

# CONTENTS

<b>WARNINGS</b>	<b>4</b>	Intermittent Ignition Device (IID)	26
Pay Attention to These Terms	4	<b>START-UP PROCEDURES</b>	<b>27</b>
<b>RECEIVING EQUIPMENT</b>	<b>5</b>	Lighting the Boiler	27
<b>GENERAL SPECIFICATIONS</b>	<b>5</b>	Filling the System	27
<b>INSTALLATION</b>	<b>7</b>	Checking the Circulator	27
Code Requirements	7	Safety Information	27
Mounting Base	7	Operating the Boiler	27
Clearance Requirements	7	To Turn Off Gas to the Boiler	28
Combustion/Ventilation Air	8	Shut-down Procedure	28
Venting Connections	9	Testing the Ignition Safety Shut-off	29
Vent Damper Installation Location	11	Safe Shut-down Tests	29
<b>VENT DAMPER WIRING</b>		Inspection Procedures	29
<b>DIAGRAM</b>	<b>14</b>	<b>REPAIR PROCEDURES</b>	<b>30</b>
Gas Supply Connections	15	Tube Cleaning Procedure	30
Gas Pressure	15	Heat Exchanger Removal	30
Water Connections & System Piping	15	Heat Exchanger Re-assembly	31
Electrical Wiring	16	Combustion Chamber Removal	31
Outdoor Air Reset Temperature		Adjustment & Replacement of	
Controller	17	Components	32
<b>PIPING DIAGRAMS</b>	<b>18</b>	Replacement Parts	33
<b>WIRING DIAGRAMS</b>	<b>20</b>	<b>WARRANTY</b>	<b>34</b>
<b>SERVICING PROCEDURES</b>	<b>26</b>		
General Location of Controls	26		
<b>SEQUENCE OF OPERATION</b>	<b>26</b>		

---

# WARNINGS

## Pay Attention to These Terms

<b>DANGER:</b>	Indicates the presence of immediate hazards which will cause severe personal injury, death or substantial property damage if ignored.
<b>WARNING:</b>	Indicates the presence of hazards or unsafe practices which could cause severe personal injury, death or substantial property damage if ignored.
<b>CAUTION:</b>	Indicates the presence of hazards or unsafe practices which could cause minor personal injury or product or property damage if ignored.
<b>NOTE:</b>	Indicates special instructions on installation, operation, or maintenance which are important but not related to personal injury hazards.

**DANGER:** Failure to install the draft hood on indoor installations and properly vent the heater to the outdoors as outlined in the Venting section of this manual can result in unsafe operation of the heater. To avoid the risk of fire, explosion, or asphyxiation from carbon monoxide, never operate this heater unless it is properly vented and has an adequate air supply for proper operation. Be sure to inspect the vent system for proper installation at initial start-up; and at least annually thereafter. Refer to the Maintenance section of this manual for more information regarding vent system inspections.

**DANGER:** Make sure the gas on which the heater will operate is the same type as that specified on the heater rating plate.

**DANGER:** When servicing or replacing components that are in direct contact with the water, be certain that:

- There is no pressure in the heater. (Pull the release on the relief valve. Do not depend on the pressure gauge reading).
- The heater water is not hot.
- The electrical power is off.

**WARNING:** Should overheating occur or the gas supply valve fail to shut, do not turn off or disconnect the electrical supply to the heater. Instead, shut off the gas supply at a location external to the heater.

**WARNING:** Do not use this heater if any part has been under water. Immediately call a qualified service technician to inspect the heater and to replace any part of the control system and any gas control which has been under water.

**WARNING:** Both natural gas and propane have an odorant added to aid in detecting a gas leak. Some people may not physically be able to smell or recognize this odorant. If you are unsure or unfamiliar with the smell of natural gas or propane, ask your local gas supplier. Other conditions, such as "odorant fade," which causes the odorant to diminish in intensity, can also hide, camouflage, or otherwise make detecting a gas leak by smell more difficult.

**WARNING:** UL recognized fuel gas detectors are recommended in all enclosed propane and natural gas applications wherein there is a potential for an explosive mixture of fuel gas to accumulate and their installation should be in accordance with the detector manufacturer's recommendations and/or local laws, rules, regulations, or customs.

**WARNING:** To minimize the possibility of improper operation, serious personal injury, fire, or damage to the heater:

- Always keep the area around the heater free of combustible materials, gasoline, and other flammable liquids and vapors.
- Heater should never be covered or have any blockage to the flow of fresh air to the heater.

---

# RECEIVING EQUIPMENT

# GENERAL SPECIFICATIONS

On receipt of your equipment, visually check for external damage to the carton. If the carton is damaged, it is suggested that a note be made on the Bill of Lading when signing for the equipment.

Remove the boiler from the carton, and if it is damaged, report the damage to the carrier immediately. Be sure that you receive the number of packages indicated on the Bill of Lading. Claims for shortages and damages must be filed with carrier by consignee.

Purchased parts are subject to replacement only under the manufacturer's warranty. Debits for defective replacement parts will not be accepted and defective parts will be replaced in kind only per our standard warranties.

When ordering parts, you must specify Model and Serial Number of the boiler. When ordering under warranty conditions, you must also specify date of installation.

**Raypak recommends that this manual be reviewed thoroughly before installing the boiler. If there are any questions which this manual does not answer, please contact your local Raypak representative.**

Raytherm hydronic boilers are design certified and tested under the requirements of the latest edition of the American National Standard, ANSI Z21.13/CSA 4.9. Each boiler has been constructed and pressure tested in accordance with the requirements of Section IV of the American Society of Mechanical Engineers Code, and factory fire tested.

These boilers are designed for indoor installation with a built-in draft hood, and a built-in sub-base for combustible flooring. Models are equipped with an intermittent ignition device (IID).


These boilers are equipped with the following components: outdoor air reset controller, water circulation pump, pressure relief valve, temperature/pressure gauge, adjustable high limit switch, drain valve, fast response temperature sensor, 40 VA transformer, pump relay, vent thermal switch, flame roll-out switch, and redundant combination gas valve. Two-stage gas valve (50% firing on first stage) is standard on models H-0090, H-0135 and H-0180.

All models are provided with a plug-in connector that is compatible with the Honeywell D80D vent damper. Similar type vent dampers made by other manufacturers, and design certified by a nationally-recognized testing agency, under the ANSI Z21.66 standard, may also be used.

Follow the installation instructions furnished with the vent damper package. The plug-in connector can also be used with power venters. Refer to the specific installation instructions supplied by the power vent manufacturer.

Model No.	Input MBTUH	Heating Capacity MBTUH	AFUE	Net AHRI MBTUH Output	Piping Connections		A	B	C	K Vent Dia.
					Water NPT	Gas NPT				
H-0042	42	35	84.0%	30	1 (in.)	1/2 (in.)	11 (in.)	5 3/4 (in.)	5 1/2 (in.)	4 (in.)
H-0066	66	54	83.0%	47	1 (in.)	1/2 (in.)	11 (in.)	5 3/4 (in.)	5 3/4 (in.)	5 (in.)
H-0090	90	74	82.7%	64	1 (in.)	1/2 (in.)	11 (in.)	5 3/4 (in.)	5 3/4 (in.)	5 (in.)
H-0135	135	109	82.8%	95	1 1/4 (in.)	1/2 (in.)	18 (in.)	6 1/4 (in.)	6 1/4 (in.)	6 (in.)
H-0180	180	148	83.2%	129	1 1/4 (in.)	1/2 (in.)	18 (in.)	6 1/4 (in.)	8 (in.)	7 (in.)

Table A: Specifications

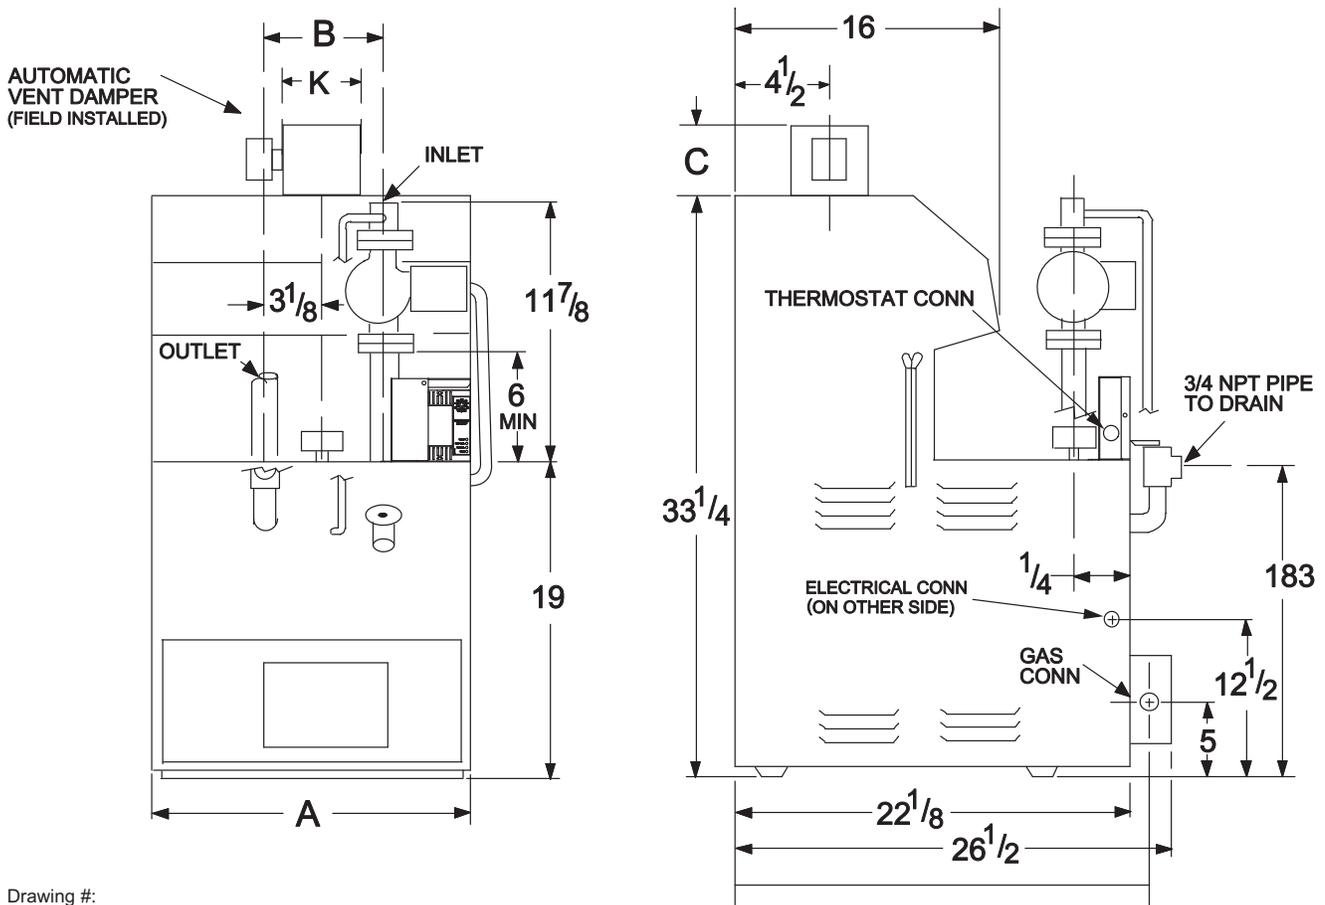

Drawing #: F10168

Fig. 1: Dimensions

# INSTALLATION

## Code Requirements

Installation must be in accordance with local codes, or in the absence of local codes, with the latest editions of the National Fuel Gas Code, ANSI Z223.1, and the National Electrical Code, ANSI/NFPA 70. In Canada, installations must conform with the current CSA B149 and the Canadian Electrical Code Part 1 CSA C22.2 No.1. Where required by the authority having jurisdiction, the installation must conform to American Society of Mechanical Engineers Safety Code for Controls and Safety Devices for Automatically Fired Boilers, CSD-1.

## Mounting Base

Boiler should be mounted on a level surface. Each boiler is designed with a built-in sub-base approved for mounting the boiler on combustible flooring. Boiler must NOT be installed on carpet.

In addition, the boiler shall be installed such that the gas ignition system components are protected from water (dripping, spraying, rain, etc.) during appliance operation and service (circulator replacement, control replacement, etc.)

**NOTE:** This boiler should be located in an area where water leakage will not result in damage to the area adjacent to the appliance or to the structure. When such locations cannot be avoided, it is recommended that a suitable drain pan, adequately drained, be installed under the appliance. The pan must not restrict air flow.

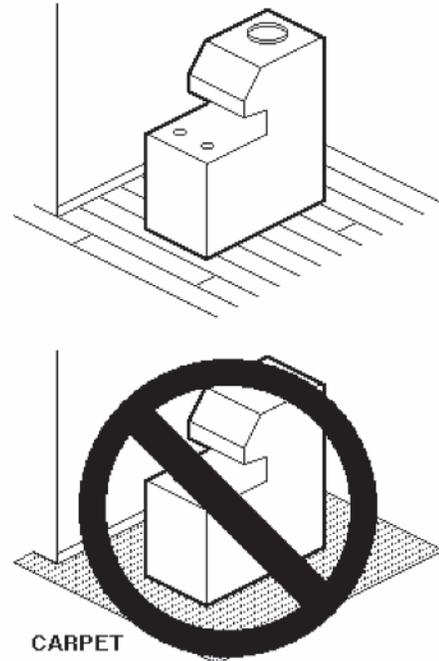


Fig. 2: Mounting Base

## Clearance Requirements

1. Minimum clearances from combustible materials are listed in Table B below. These clearances can be reduced with appropriate levels of protection, as listed in table 10.2.3 of the National Fuel Gas Code.
2. A front clearance of at least 24" is recommended for adequate service of burner-tray and controls.

Model No.	Floor	Front	Back	Right	Left	Top	Flue Vent
0042 0066	Comb.	4 (in.)	6 (in.)	6 (in.)	6 (in.)	16 (in.)	6 (in.)
0090 0135 0180	Comb.	Alcove	6 (in.)	6 (in.)	6 (in.)	16 (in.)	6 (in.)

Table B: Minimum Clearances From Combustible Materials


3. Except for carpeted flooring, boilers are certified for installation on combustible floors.
4. For un-insulated hot water pipes, maintain a 2" clearance, or consult local authority having jurisdiction.

One opening shall be within 12" of the top, and the other opening within 12" of the floor. If additional gas appliances are installed in the same space, the total input of all gas appliances installed in the same space, must be considered in the calculation. Refer to the latest edition of the National Fuel Gas Code for additional requirements.

## Combustion/Ventilation Air

**WARNING:** Air supply to the boiler room must not be affected by mechanical exhaust vents located in other parts of the house, such as kitchen or bathroom fans, or attic blowers. Mechanical exhaust vents may create a negative pressure condition in the boiler room that can become a hazard of asphyxiation, explosion or fire.

**CAUTION:** Combustion air must not be contaminated by corrosive chemical fumes which can damage the boiler. Measures must be taken to prevent the entry of corrosive chemical fumes to the combustion and ventilation air supply. Such chemicals include, but are not limited to, chlorinated and/or fluorinated hydrocarbons such as found in refrigerants, aerosol propellants, drycleaning fluids, degreasers, and paint removers. Other harmful elements may come from bleaches, air fresheners, or mastics. Vapors from these types of products can form corrosive acid compounds when burned in a gas flame. The resulting acid condensate can damage or substantially reduce the life of the heater. It may be necessary to provide outside air directly to the heater in order to avoid this problem.

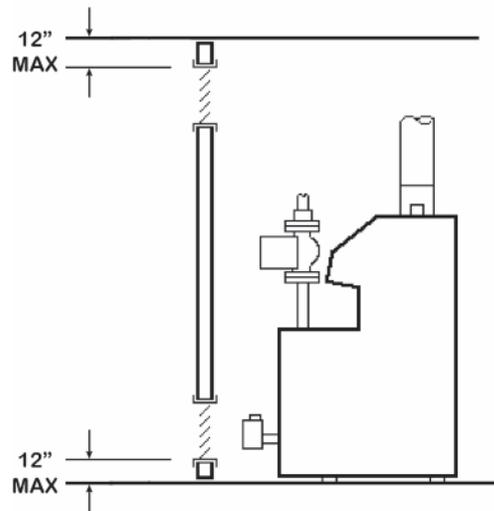

**Fig. 3: Location of Openings for Combustion/Ventilation Air**

**NOTE:** If louvers, grills or screens are used on the openings, obtain the net free area requirements from their supplier or manufacturer. If the design free area of a louver is not known nor available, it shall be assumed that wood louvers will have 20-25 percent free area and metal louvers will have 60-75 percent free area as specified in the National Fuel Gas Code.

1. The boiler must be provided with adequate supply of air for proper combustion and ventilation in accordance with the latest edition of the National Fuel Gas Code, ANSI Z223.1, or applicable provisions of the local building codes.
2. Models 0042 and 0066 only: When the boiler is installed in a confined space such as a utility room or closet where all air is supplied from inside the building, the boiler room must be provided with two openings, each one having a minimum net free area, in square inches as shown in Table C.

Model No.	Sq. in. of Free Area
0042	70
0066	

**Table C: Minimum Net Free Area**

3. If the boiler room is located against an outside wall and air openings can communicate directly with the outdoors, the two openings on the outside wall must each have a net free area as shown in Table D.

Model No.	Sq. in. of Free Area
0042	12
0066	18
0090	24
0135	35
0180	45

**Table D: Minimum Net Free Area**

Location of the openings is the same as in the previous case - that is, within 12" of the top, and within 12" of the bottom of the enclosure. If horizontal ducts are used, the area must be doubled and the duct area shall not be less than the area of the openings they connect, and in no case shall the smallest dimension be less than 3".

## Venting Connections

These units are atmospheric boilers with built-in draft-hoods, operating with negative vent pressure. Use cat I vent materials. Vent piping the same size or larger than the drafthood outlet is recommended; however, when the total vent height (drafthood outlet to vent terminal) is at least ten (10) feet, the vent pipe size may be reduced by one size only as specified in the latest edition of the National Fuel Gas Code, ANSI Z223.1.

As much as possible, avoid long horizontal runs of vent pipe and too many elbows. If installation requires horizontal runs, the vent pipe must have a minimum of 1/4 inch per foot rise and should be supported at not less than five foot intervals. Maximum vent connector horizontal length shall be 1-1/2 feet (18 inches) for each inch of connector diameter as shown in Table E.

Model No.	Vent Connector Diameter (in.)	Max. Horizontal Length (ft)
0042	4	6
0066, 0090	5	7.5
0135	6	9
0180	7	10.5

**Table E: Maximum Horizontal Length of Vent Pipe**

Gas vents supported only by the flashing and extending above the roof more than five feet should be securely guyed or braced to withstand snow and wind loads. We recommend use of insulated vent pipe spacer through the roofs and walls.


For protection against rain or blockage by snow, the vent pipe must terminate with a listed vent cap which complies with the local codes or, in the absence of such codes, to the latest edition of the National Fuel Gas Code, ANSI Z223.1.

The discharge opening must be a minimum of two (2) feet vertically from the roof surface and at least two (2) feet higher than any part of the building within eight (8) feet. Vent stack shall be at least five (5) feet in vertical height above the drafthood outlet.

The vent cap location shall have a minimum clearance of four (4) feet horizontally from, and in no case above or below, unless a 4-foot horizontal distance is maintained, from electric meters, gas meters, regulators and relief equipment.

The weight of the vent stack or chimney must not rest on the boiler's drafthood. Support must be provided in compliance with applicable codes. The boiler top and drafthood must be readily removable for maintenance and inspection. Vent pipe should be adequately supported to maintain proper clearances from combustible construction.

Type "B" double-wall (or equivalent) vent pipe is recommended. However, single-wall metal vent pipe may be used as specified in the latest edition of the National Fuel Gas Code ANSI Z223.1.

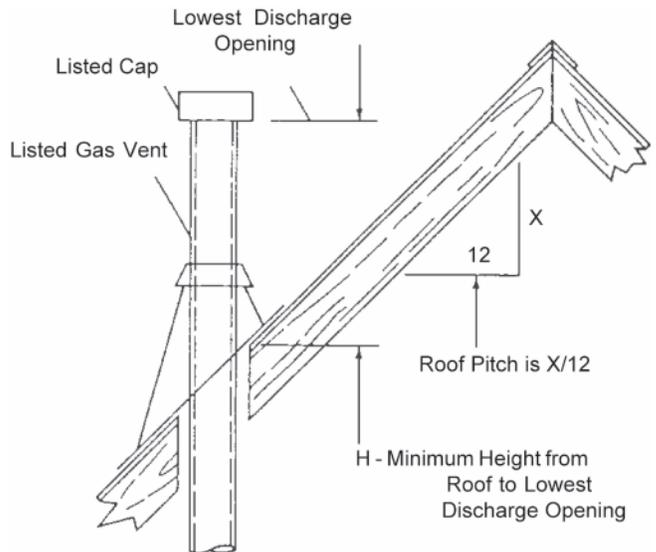

Refer to Table F for detailed information

**Fig. 4: Minimum Height from Roof to Lowest Discharge Opening**

Roof Pitch (X/12)	H (Min. ft)
Flat to 6/12	1
6/12 to 7/12	1.25
Over 7/12 to 8/12	1.5
Over 8/12 to 9/12	2
Over 9/12 to 10/12	2.5
Over 10/12 to 11/12	3.25
Over 11/12 to 12/12	4
Over 12/12 to 14/12	5
Over 14/12 to 16/12	6
Over 16/12 to 18/12	7
Over 18/12 to 20/12	7.5
Over 20/12 to 21/12	8

**WARNING:** These boilers must not be connected into any portion of mechanical draft systems operating under positive pressure. To do so may cause the flue products to be discharged into the living space causing serious health injury.


For connections to gas vents or chimneys, vent installations shall be in accordance with the Venting of Equipment section of the National Fuel Gas Code, ANSI Z223.1, or applicable provisions of the local building codes.

**Common Vents**


Manifolds that connect more than one boiler to a common chimney must be sized to handle the combined load. Consult available guides for proper sizing of the manifold and the chimney. At no time should the area be less than the area of the largest outlet.

Refer to Fig. 4 for graphical reference

**Table F: Minimum Height from Roof to Lowest Discharge Opening**

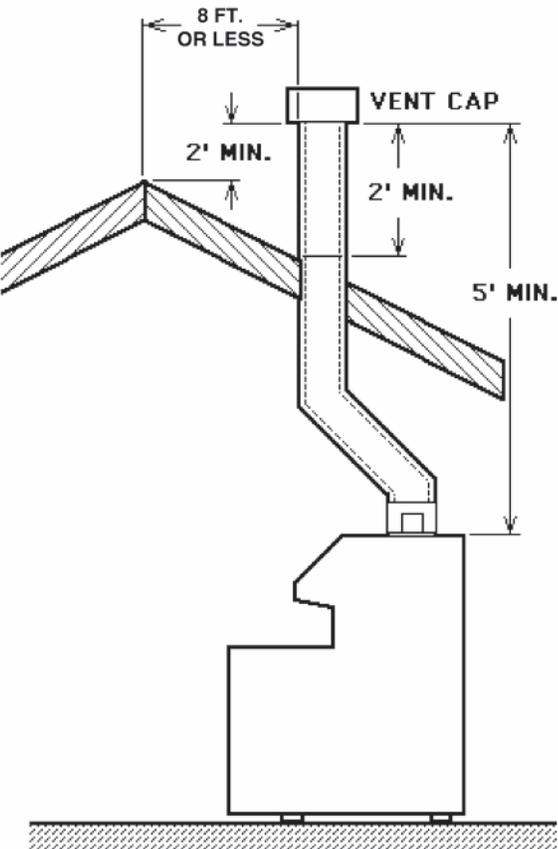

**Fig. 5: Minimum Venting Measurements**

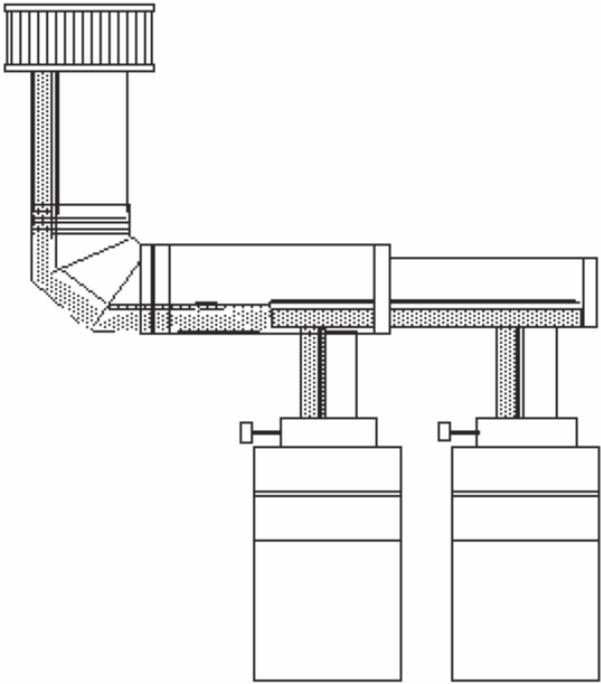

**Fig. 6: Common Venting**

At the time of removal of an existing boiler, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

1. Seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch and make sure there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
3. Insofar as is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so appliance will operate continuously.
5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe to visually check spillage.
6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their previous conditions of use.
7. Any improper operation of the common venting system should be corrected so that the installation conforms with the latest edition of the National Fuel Gas Code, ANSI Z223.1. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables in the National Fuel Gas Code, ANSI Z223.1 and CSA - B149.

## Vent Damper Installation Location

The vent damper supplied with each boiler must be located in the vent so that it serves only the appliance for which it is intended.

If improperly installed, a hazardous condition, such as an explosion or carbon monoxide poisoning, could result. Make certain that it is mounted in an accessible location at least 6 in. (152.4 mm) from any combustible material or the heat exchanger and that the position indicator is in a visible location.

The vent damper must be installed at the appliance draft hood, and without modification of the draft hood.

To connect the vent damper wiring to the boiler wiring, connect the damper circuit plug to the boiler circuit plug.

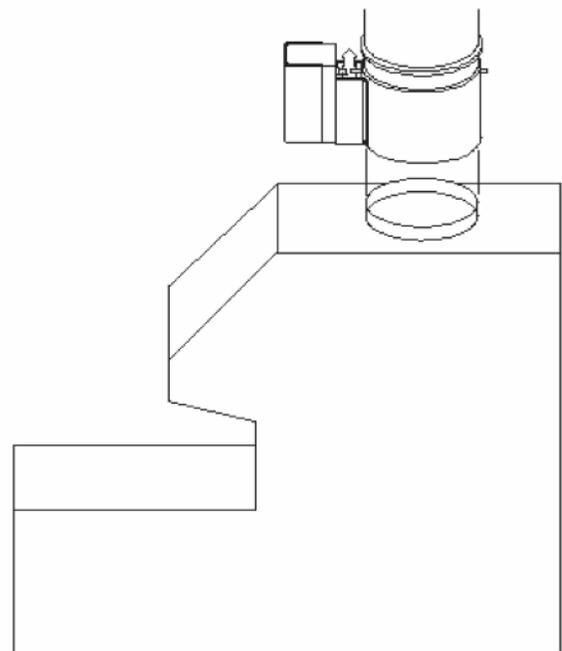



Fig. 7: Vent Damper Location

**WARNING:** Carefully read and follow the installation instructions furnished with the vent damper package. Failure to follow these instructions can cause asphyxiation, explosion or fire.

## Mounting

On vertical vents, the vent damper may be mounted with the actuator in any position. On horizontal vents, do not mount the actuator either directly above or directly below the vent pipe; mount the vent damper actuator to the side of the vent.

The vent damper ships set up for a continuous pilot system. Since the Raytherm Residential is equipped with an Intermittent Pilot, the hole in the vent damper blade must be plugged using the knockout plug provided in the parts envelope.

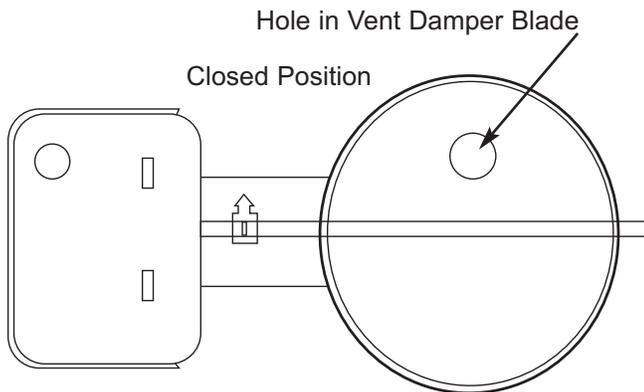

DO NOT plug the hole if installing the vent damper on a continuous pilot system as this will create a hazardous condition.

Fig. 8: Vent Damper

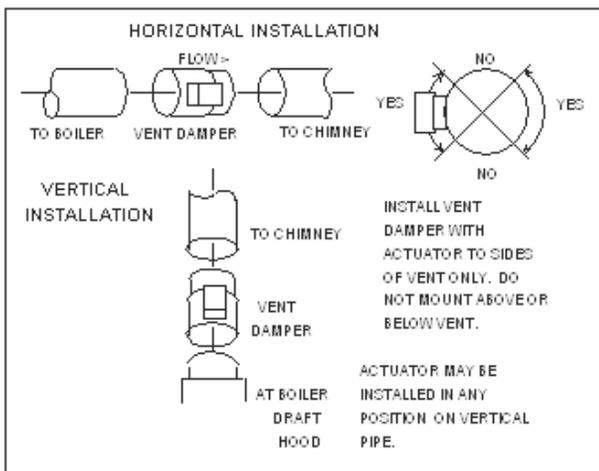


Fig. 9: Installing The Vent Damper in Horizontal & Vertical Vents

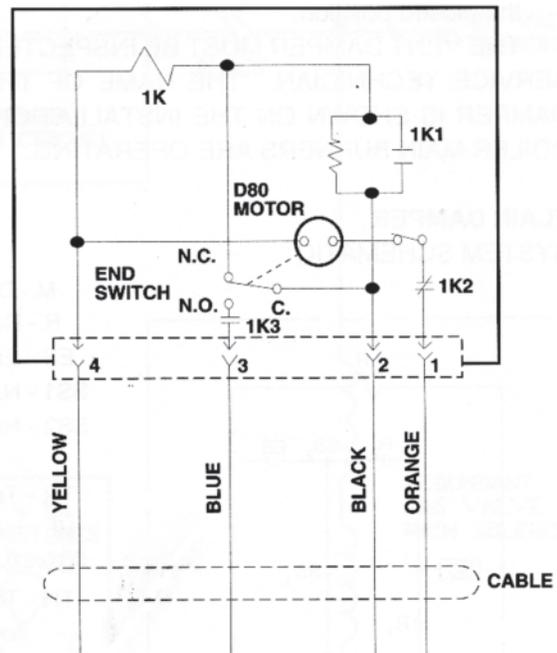


Fig. 10: D80D General Wiring Diagram

Install the vent damper to service only the single appliance for which it is intended. If improperly installed, a hazardous condition, such as an explosion or carbon monoxide poisoning, could result.

## Vent Damper Operation

For safe, efficient operation, the vent damper and all flue-product-carrying areas of the appliance must be checked annually, with particular attention given to deterioration from corrosion or other sources.

Check vent damper operation as follows:

1. When the boiler is off, check that the vent damper position indicator points to the closed position (see Fig. 11).

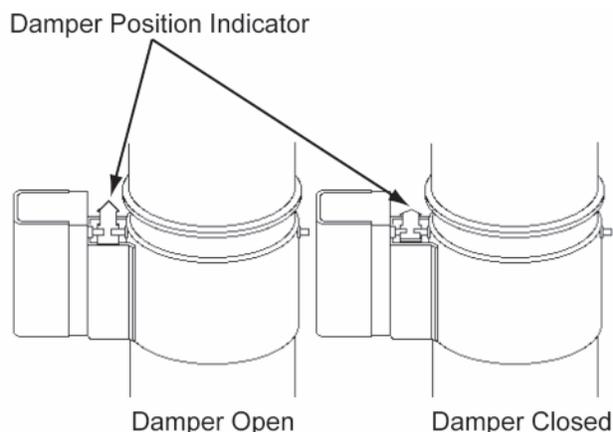



Fig. 11: Vent Damper Position Indicator

**NOTE:** To place vent damper in the open position to allow burner operation: Turn the power off. Turn the damper blade to fully open position (arrow facing same direction as vent pipe). Turn power on.

2. Turn the thermostat or controller up to call for heat and check that the vent damper indicator points to the open position, as shown in Fig. 11.
3. Turn the thermostat or controller down again and check that the vent damper position indicator returns to the closed position.

The vent damper must be inspected at least once a year by a trained, experienced service technician. The name of the person who originally installed your vent damper is shown on the installation label. Damper must be in open position when boiler main burners are operating.

### Flair Damper

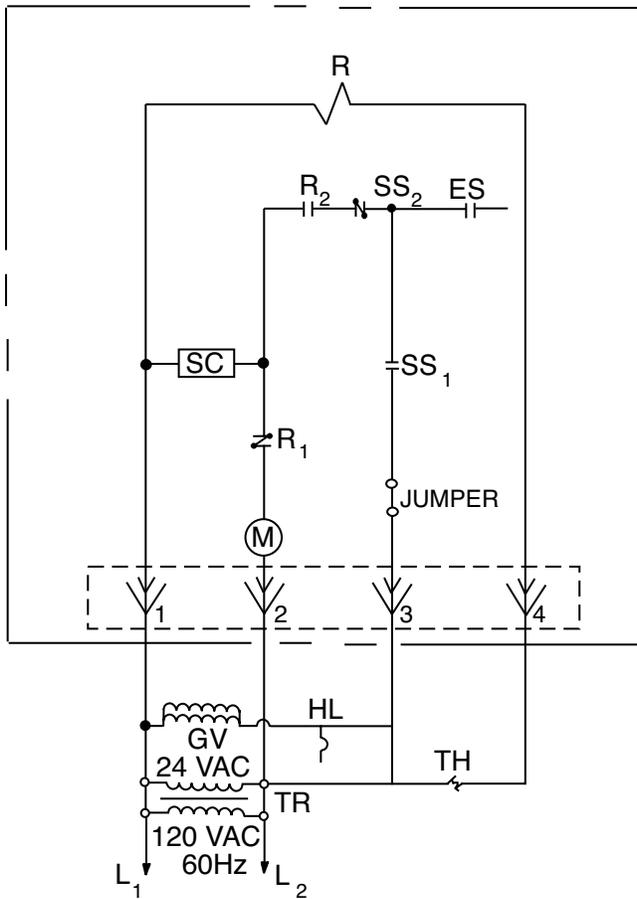

Note: Circuit shown with damper in closed position, no call for heat.

Fig. 12: System Schematic


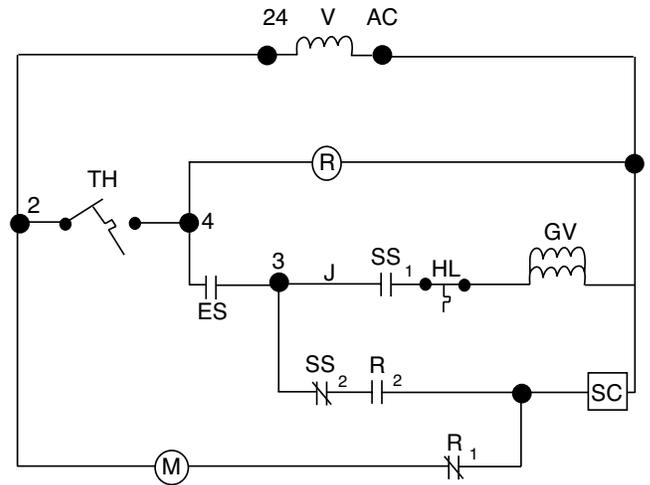


Fig. 13: Ladder Diagram

Abbreviation	Description
M	Damper Motor
R	Relay
ES	End Switch
SS1	N/C Safety Switch
SS2	N/O Safety Switch
TR	Transformer, 120/24V
HL	High Limit
GV	24V Gas Valve
TH	Thermostat, Heating, Low Voltage
J	Jumper

Table G: Legend for Figures 12 & 13

# EFFIKAL RVGP VENT DAMPER

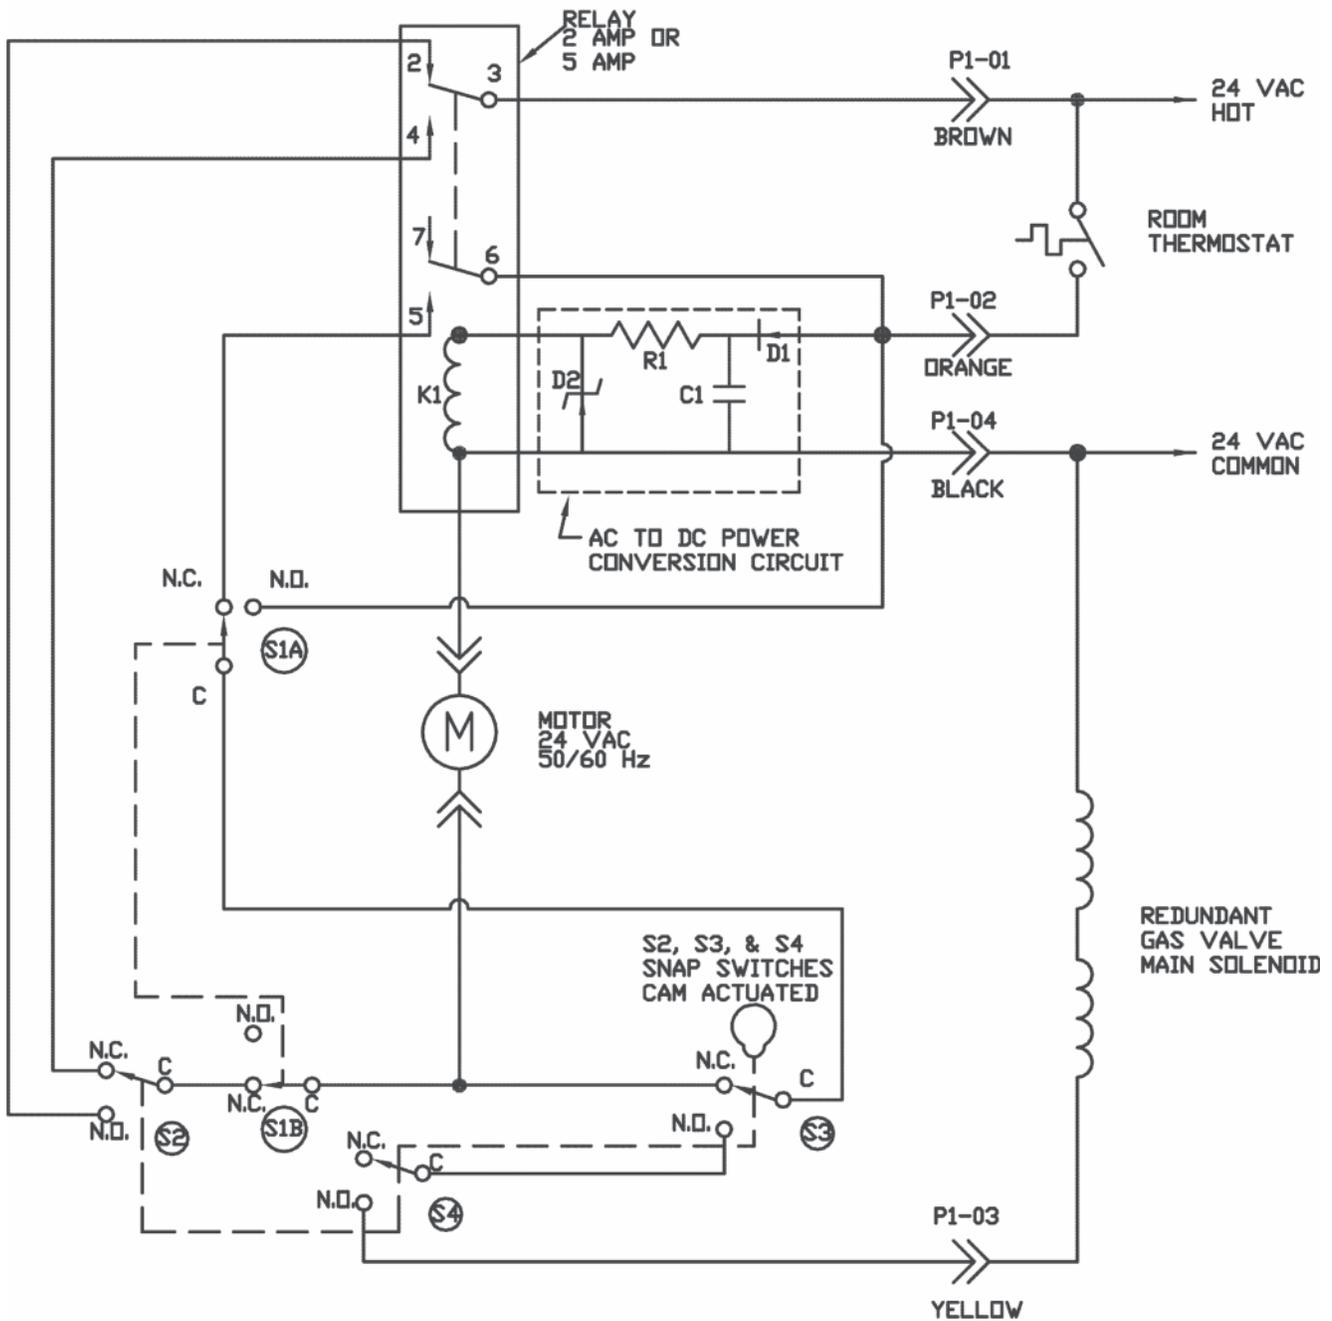

Model No.	1/2 in. Pipe		3/4 in. Pipe		1 in. Pipe		1 1/4 in. Pipe	
	Nat.	Pro.	Nat.	Pro.	Nat.	Pro.	Nat.	Pro.
0042	125	350	500					
0066	60	160	175	460				
0090	30	80	125	300	400			
0135	15	40	60	150	200	450		
0180		20	35	90	115	300	425	

Table H: Maximum Equivalent Pipe Length (Feet)

## Gas Supply Connections

The inlet gas connection of the boiler gas valve is 1/2". Provide an adequate gas piping supply line no smaller than 1/2", according to Table H above.

Gas piping must have a sediment trap ahead of the boiler gas controls, and a manual shut-off valve located outside the jacket. All gas piping should be tested after installation in accordance with local codes.

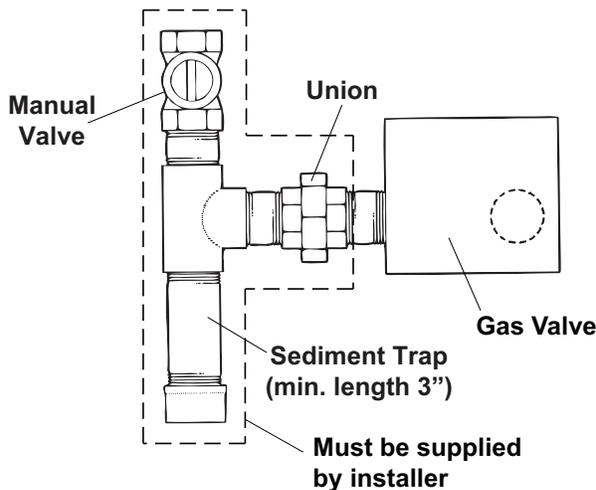


Fig. 14: Sediment Trap

**CAUTION:** The boiler and its manual shut-off valve must be disconnected from the gas supply during any pressure testing of that system at test pressures in excess of 1/2 psi (3.45 kPa). Dissipate test pressure in the gas supply line before reconnecting the boiler and its manual shut-off valve to gas supply line. FAILURE TO FOLLOW THIS PROCEDURE MAY DAMAGE THE GAS VALVE. OVER PRESSURED GAS VALVES ARE NOT COVERED BY WARRANTY. The boiler and its gas connections shall be leak tested before placing the appliance in operation. Use soapy water for leak test. DO NOT use open flame.

**NOTE:** Do not use teflon tape on gas line pipe thread. A flexible sealant suitable for use with Natural and Propane gases is recommended.

These boilers are also certified to operate on propane gas, when equipped with the combination gas valve and orifices (pilot and main burners) sized for propane gas.

## Gas Pressure

The gas valve is provided with pressure taps to measure gas pressure upstream of the gas valve and downstream which is the same as the manifold pressure.

Gas Type	Inches WC Min.	Inches WC Max.	Regulator Setting
Natural	7.0	10.5	3.5
Propane	12.0	13.0	11.0

Table I: Minimum and Maximum Gas Pressure

## Water Connections & System Piping

The pipe size for water connections is shown on page 6. Typical piping systems are shown on pages 18-19.

This boiler is supplied with a circulator and built-in bypass as standard to ensure the required minimum water flow in the boiler. The bypass on models H-0135 and H-0180 is provided with an adjustable valve that is factory-set in the full-open position. The handle is

shipped loose. The full-open position is appropriate for most systems, and ensures adequate flow through the boiler.

If system flow is inadequate, (indicated by excessive temperature drop through the system) the bypass valve can be throttled slightly. Care must be taken against over-throttling which may lead to inadequate flow through the boiler and boiler harmonics (a humming sound from the heat exchanger).

If adequate system flow cannot be obtained without causing harmonics, an additional pump is required. The factory-mounted circulator will provide adequate water flow for systems designed at a 20°F temperature drop, and system pressure drop or head not exceeding that which is shown in Table J.

Model No.	System Flow (gpm)	Max. System Head (ft/WC)
H-0042	3.5	8.0
H-0066	5.3	8.5
H-0090	7.3	6.5
H-0135	11.0	10.0
H-0180	14.6	7.0

**Table J: System Pressure Drop**

When the total system head exceeds the available head pressures, a primary/secondary pumping system is recommended.

The minimum boiler operating temperature to avoid condensation must be 105°F. When operating at low temperature applications,  $\Delta T$  (temperature rise) must be 20°F or less.

Propylene glycol solution is commonly used in the heating system when freeze protection is required. This will affect the system design and pump performance. As a rule of thumb, 50% solution of propylene glycol will require the system flow (gpm) to increase by 14%, and the system head (ft/WC) by 23% in order to maintain the same heat transfer load.

Systems with multiple zones may require an additional circulator. Consult manufacturer's data for valve pressure drops. When an indirect water heating system is used, it is recommended that a separate circulator be installed to meet the required flow and pressure drop conditions of the indirect water heater.

We recommend that the make-up water from the cold water line have a check valve, gate valve, and feedwater regulator set at 12 psi. Install unions and gate or

ball valves at inlet and outlet connections at the boiler to facilitate servicing.

The pressure relief valve is mounted on the boiler and must be piped to a drain. We recommend that all high points be vented and that purge valves be installed. A boiler installed above radiation level must be provided with a low water cutoff device.

The boiler, when used in connection with a refrigeration system, must be installed so that the chilled medium is piped in parallel with the boiler with appropriate valves to prevent the chilled medium from entering the boiler.

The boiler piping system of a hot water heating boiler, that is connected to heating coils located in air handling units where they may be exposed to refrigerated air circulation, must be equipped with flow control valves or other automatic means to prevent gravity circulation of the boiler water during the cooling cycle.

A diaphragm expansion tank should be installed in the return line. A typical 10 gallon expansion tank can be used on models H-0042, and H-0066, and a 14 gallon expansion tank can be used on models H-0090, H-0135 and H-0180. Consult tank manufacturer for correct sizing.

## Electrical Wiring

The electrical power supply requirement for these boilers is 120 VAC, single-phase, 60 Hz. Field wiring connections and electrical grounding must comply with the local codes, or in the absence of local codes, with the latest edition of the National Electrical Code, ANSI/NFPA 70.

Provide a separate fused circuit from the main electrical panel to the boiler, and a disconnecting means within sight of the boiler.

Remove the control box cover and make the power supply connections in the field wiring compartment. (See general location of controls drawing on page 26). The pump is supplied and factory-wired to operate with the boiler. The "TH" wire leads are for the room thermostat or zone valve connections.

The room thermostat should be installed in accordance with the manufacturer's instructions. The thermostat heat anticipator should be set at 1.0 ampere (automatic ignition) and 0.60 ampere (standing pilot) for single-zone installations. For multi-zone applications, the heat anticipator setting should be based on the ampere load in the thermostat circuit.

**NOTE:** If it is necessary to replace any of the original wiring, it must be replaced with 105°C wire or its equivalent, except 150°C black wire must be replaced with 150°C wire or its equivalent.

## Outdoor Air Reset Temperature Controller

The standard configuration of the temperature controller provides for outdoor air reset of the system target water temperature based on a user-defined reset ratio. The controller operating range is established by a minimum system water setpoint of 120°F and a maximum outlet temperature of 210°F. The controller will provide two-stage firing of the heater. The controller is also equipped with a connection for an external thermostat input for use with an indirect load such as an indirect DHW tank for hot water production.

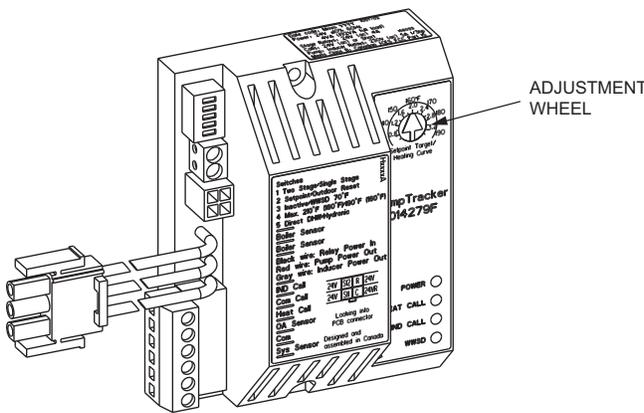


Fig. 15: Temperature Controller

The primary functions of the controller are set using the Operating Temperature dial and the DIP switches. See Table K. The controller has 4 LEDs to indicate the its condition:

**Power** - *On Solid* - Turns on when 24 Vac Power is present.

**Heat Call** - *On Solid* - Turns on when Heat Call (short or 0-32 Vac) is present.

*Flashing* - Boiler outlet sensor error. While present, operation ceases.

**IND Call** - *On Solid* - Turns ON when IND Call (short or 0-32 Vac) is present.

*Flashing* - System supply sensor error. While present, operation continues using boiler outlet sensor.

**WWSD** - *On Solid* - Turns on when in Outdoor Reset AND WWSD Active AND control in WWSD.

*Flashing* - Outdoor sensor error. While present, operation continues with Fixed boiler target of 140 based on 32°F.

ITEM	FEATURE	SETTING / DESCRIPTION	DEFAULT
Dial	Operating Temperature	Reset Ratio 0.4 to 3.6 / Setpoint Target 120°F to 200°F	Reset Ratio 0.4 to 3.6
DIP #1	Firing Mode	Single Stage (On) / Two Stage (Off)	Single Stage (On)
DIP #2	Configuration	Outdoor Reset (On) / Setpoint (Off)	Outdoor Reset (On)
DIP #3	Warm Weather Shut Down	Active 70°F (On) / Inactive (Off)	Active 70°F (On)
DIP #4	Boiler Max Outlet Setting	Boiler Maximum (dependent on DIP #5) - Default: On o If DIP #5 set to Hydronic (On): 210°F (Off) / 190°F(On) o If DIP #5 set to Direct DHW (Off): 180°F (Off) / 160°F(On)	190°F(On)
DIP #5	Space Heating or Direct Domestic Hot Water	Direct DHW (Off) / Hydronic (On) - Default: Hydronic (On)  Note: If DIP #5 is set to Direct DHW (Off), the operation is based on Setpoint regardless of DIP #2 setting.	Hydronic (On)

Table K: Outdoor Air Reset Temperature Controller Settings

## Hydronic with Outdoor Air Reset

For hydronic operation with outdoor air reset, the System Supply Sensor (S2) is used as the operating sensor. Boiler Outlet Sensor (S1) is used for boiler outlet maximum limiting. Boiler Pump (P1) is controlled by the boiler and is cycled off using a 5-minute fixed purge delay after burner operation has ceased.

The DIP switch settings are as follows:

- DIP 1 ON (ON/OFF) – OFF (2-STAGE)
- DIP 2 ON (OUTDOOR RESET)
- DIP 3 ON (WWSD 70°F)
- DIP 4 ON (190°F BOIL MAX)
- DIP 5 ON (HYDRONIC)


## Hydronic, Outdoor Air Reset with Indirect DHW

For hydronic operation with outdoor air reset and Indirect DHW, the System Supply Sensor (S2) is used as the operating sensor. Boiler Outlet Sensor (S1) is used for boiler outlet maximum limiting. Contact closure from an aquastat located on an indirect DHW tank will cause the controller to operate to a boost temperature to satisfy the indirect call for heat. Once the aquastat opens the controller will return to normal operation. The indirect pump is operated by an external relay (by others). The Boiler Pump (P1) is controlled by the boiler and is cycled off using a 5-minute fixed purge delay after burner operation has ceased.

The DIP switch settings are as follows:


- DIP 1 ON (ON/OFF) – OFF (2-STAGE)
- DIP 2 ON (OUTDOOR RESET)
- DIP 3 ON (WWSD 70°F)
- DIP 4 ON (190°F BOIL MAX)
- DIP 5 ON (HYDRONIC)

## Piping Diagrams

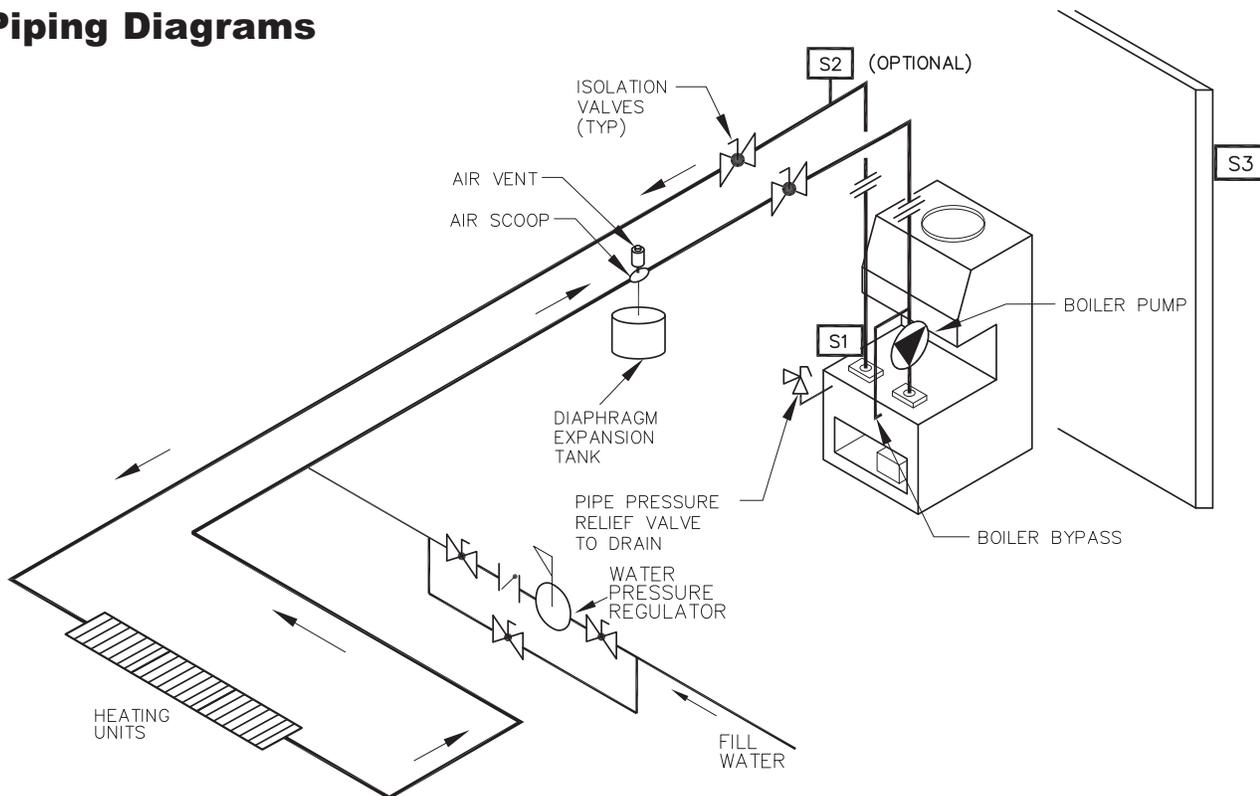


Drawing #:  
8773

Fig. 16: Single-Zone Piping

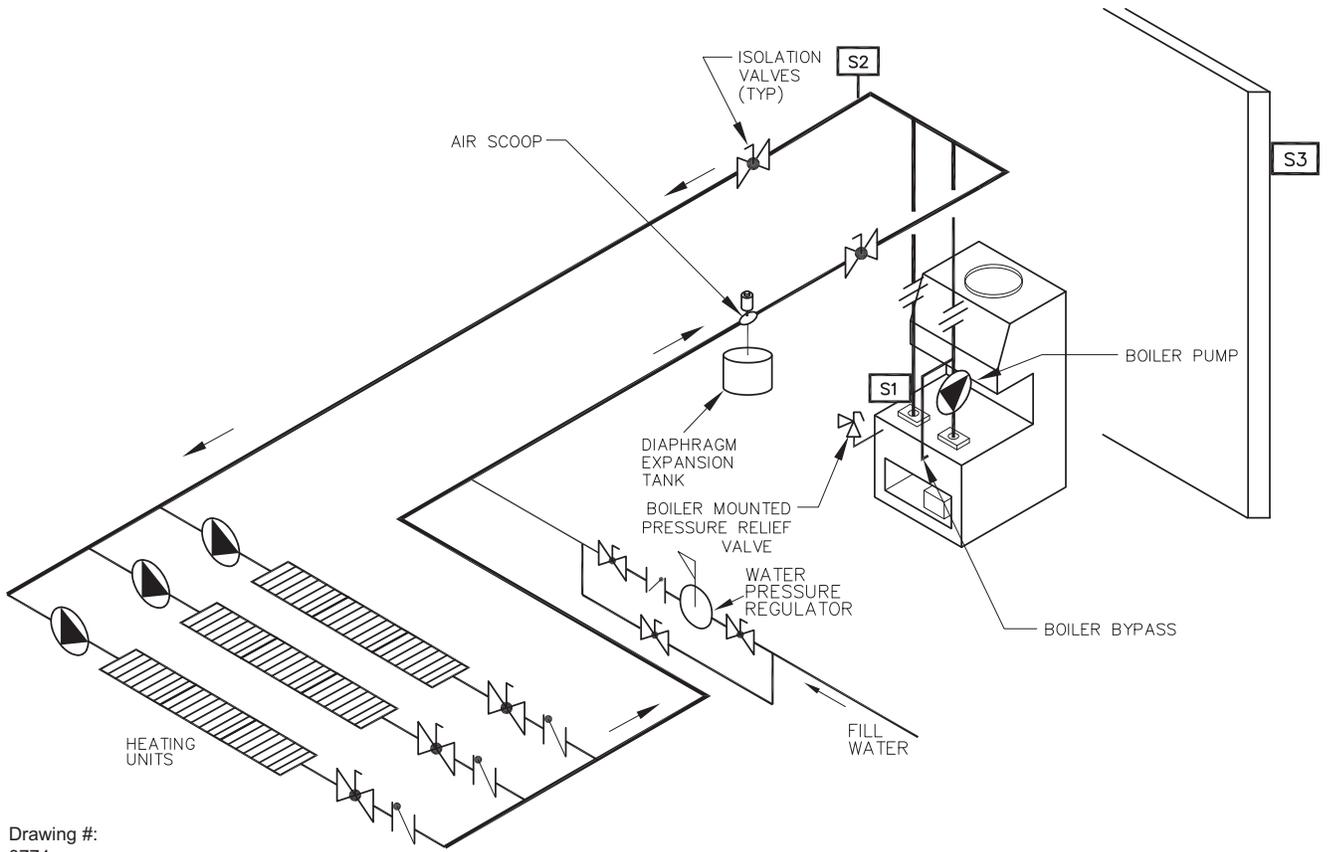

Drawing #:  
8774


**Fig. 17: Multiple Zones with Circulators**

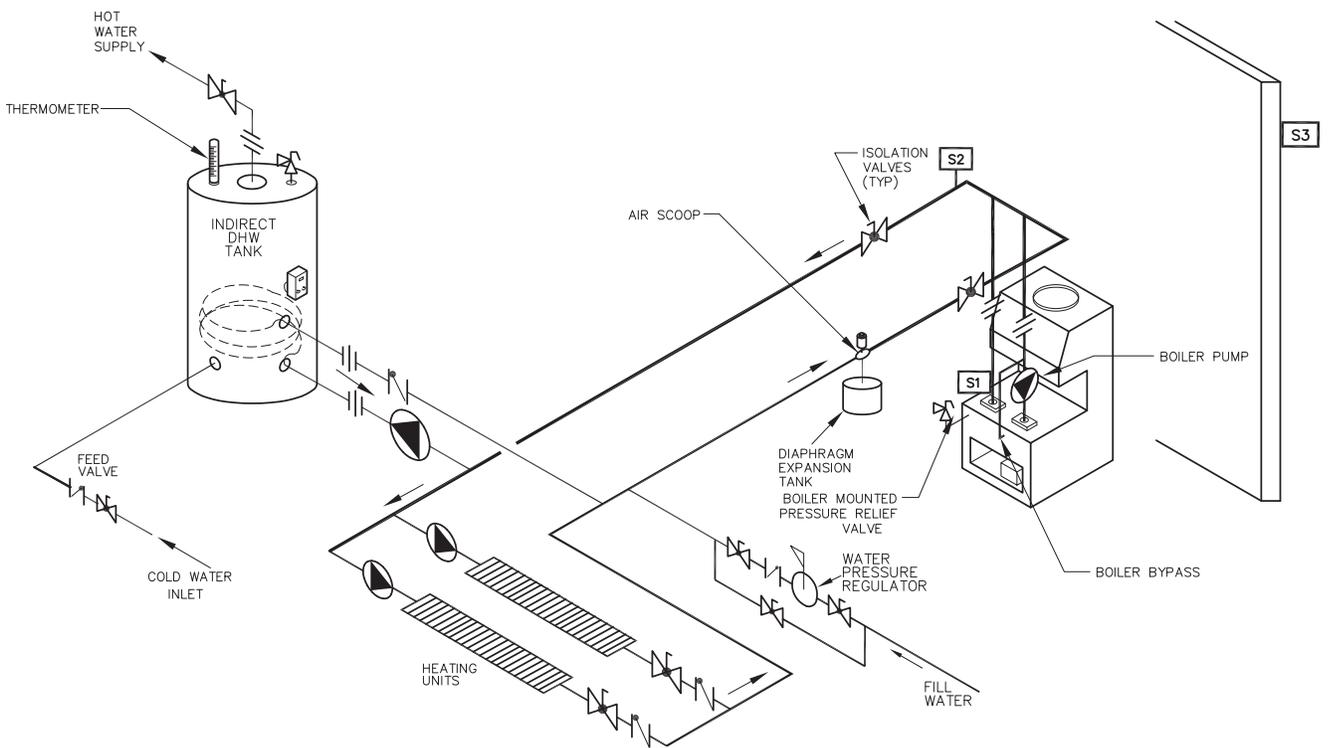

Drawing #:  
8775

**Fig. 18: Multiple Zones with Circulators and Indirect DHW Tank**

# Wiring Diagrams

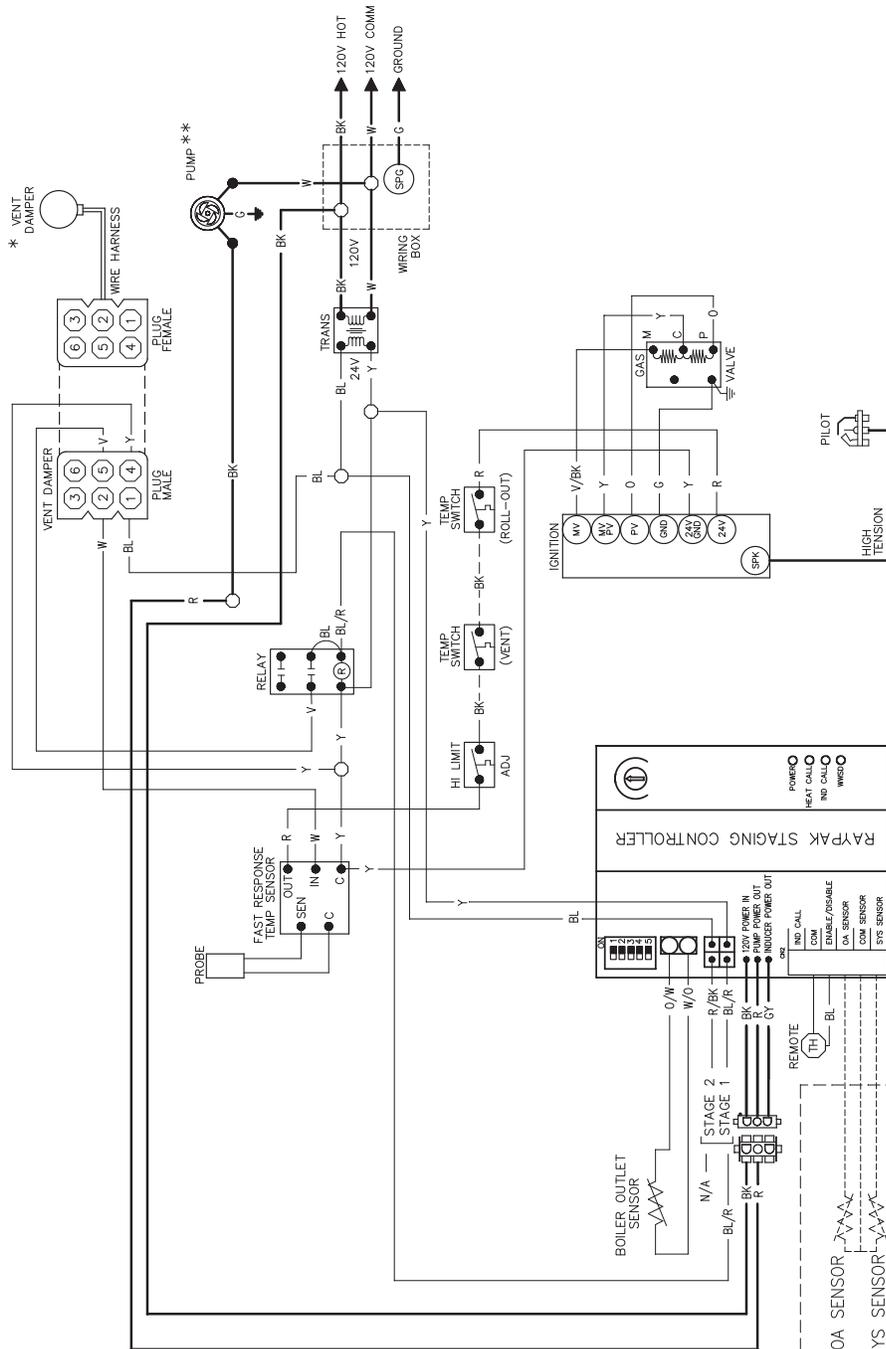

KEY	
---	24V 105°C
---	24V 150°C
---	120V 105°C
---	120V 150°C
○	WIRE NUT
⊕	GROUND
⊖	THERMOSTAT
BK	BLACK
BR	BROWN
R	RED
O	ORANGE
Y	YELLOW
G	GREEN
BL	BLUE
V	VIOLET
W	WHITE

NOTES:


- \* REFER TO INSTALLATION/OPERATING INSTRUCTIONS AND WIRING DIAGRAM SUPPLIED WITH VENT DAMPER.
- \*\* PUMP DELAY 5 MINUTES.
- IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE BOILER MUST BE REPLACED, IT MUST BE REPLACED WITH 105°C WIRE OR ITS EQUIVALENT, AND 150°C AS NOTED.

CHECKED BY:	
APPROVED BY:	
ORIG. E.O.	2866
	07/06/94
CHG. E.O.	5495
	2/19/16
<b>Raypak</b>	
<b>WIRE DIAGRAM IID</b>	
<b>FIRING MODE — ON/OFF</b>	
BOILER INPUTS:	42,000 THRU 66,000 BTUH
BOILER SIZE:	42-66
BOILER TYPE:	H4
	152357
	6

Drawing #: 152357 rev 6

For a full-size drawing visit: [www.raypak.com/commercial/wiring\\_diagrams](http://www.raypak.com/commercial/wiring_diagrams)

Drawing #: 152358 rev 5

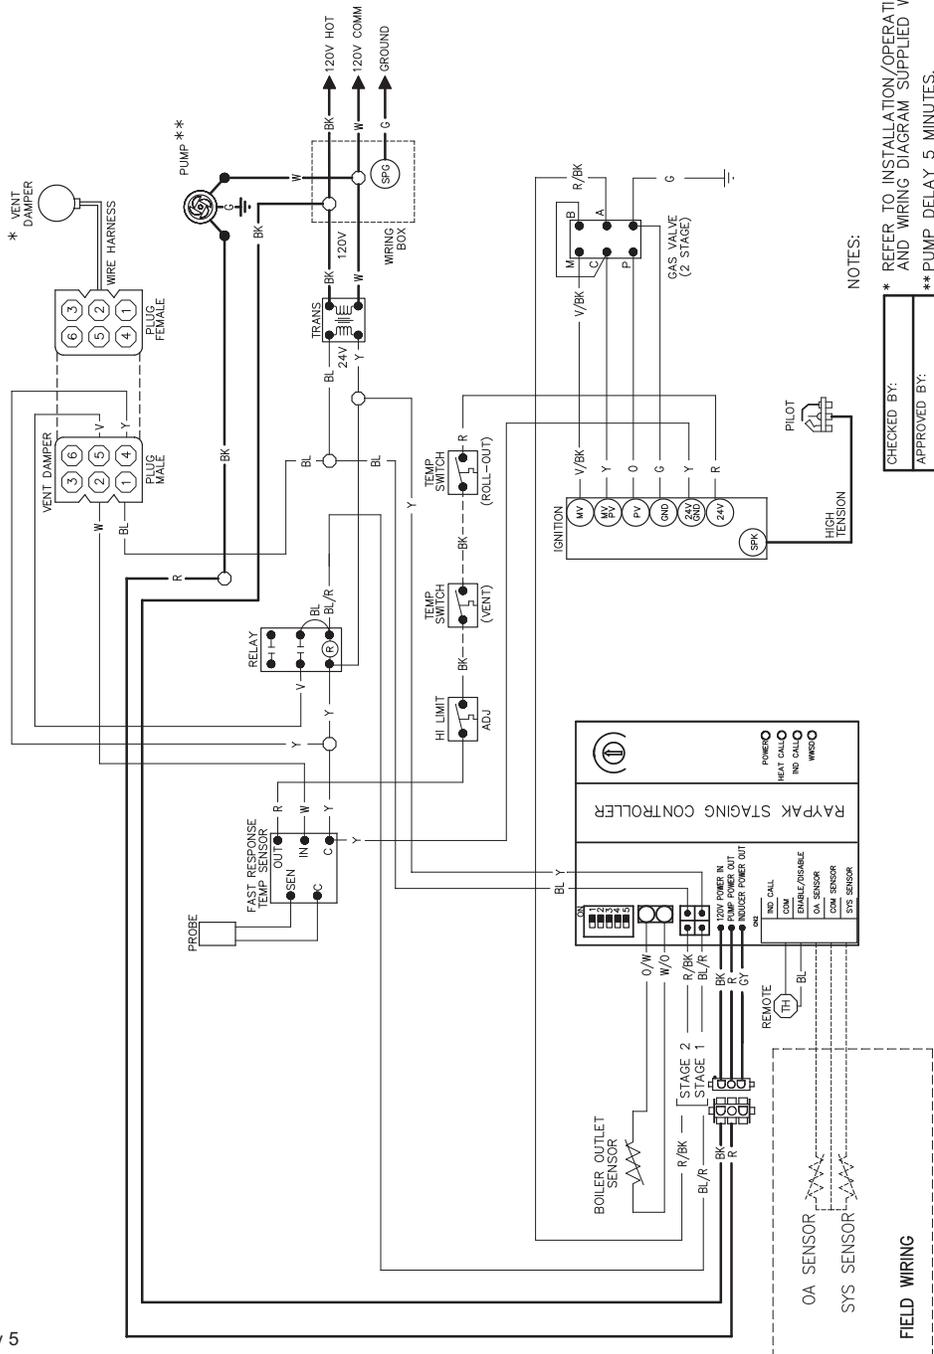

KEY	24V 105°C	WIRE NUT
	24V 150°C	GROUND
	120V 105°C	THERMOSTAT
	120V 150°C	BK - BLACK
		BR - BROWN
		R - RED
		O - ORANGE
		Y - YELLOW
		G - GREEN
		BL - BLUE
		V - VIOLET
		W - WHITE

CHECKED BY:	
APPROVED BY:	
ORIG. E.O.	2866
CHG E.O.	07/06/94
	5205
	2/27/14
<b>Raypak</b>	
<b>WIRE DIAGRAM IID</b>	
<b>FIRING MODE - 2 STAGE</b>	
BOILER INPUTS:	90,000 THRU 180,000 BTUH
BOILER SIZE:	90-180
BOILER TYPE:	H3

NOTES:  
 \* REFER TO INSTALLATION/OPERATING INSTRUCTIONS AND WIRING DIAGRAM SUPPLIED WITH VENT DAMPER.  
 \*\* PUMP DELAY 5 MINUTES.  
 IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE BOILER MUST BE REPLACED, IT MUST BE REPLACED WITH 105°C WIRE OR ITS EQUIVALENT, AND 150°C AS NOTED.

For a full-size drawing visit: [www.raypak.com/commercial/wiring\\_diagrams](http://www.raypak.com/commercial/wiring_diagrams)

(PROVIDED BY OTHERS)



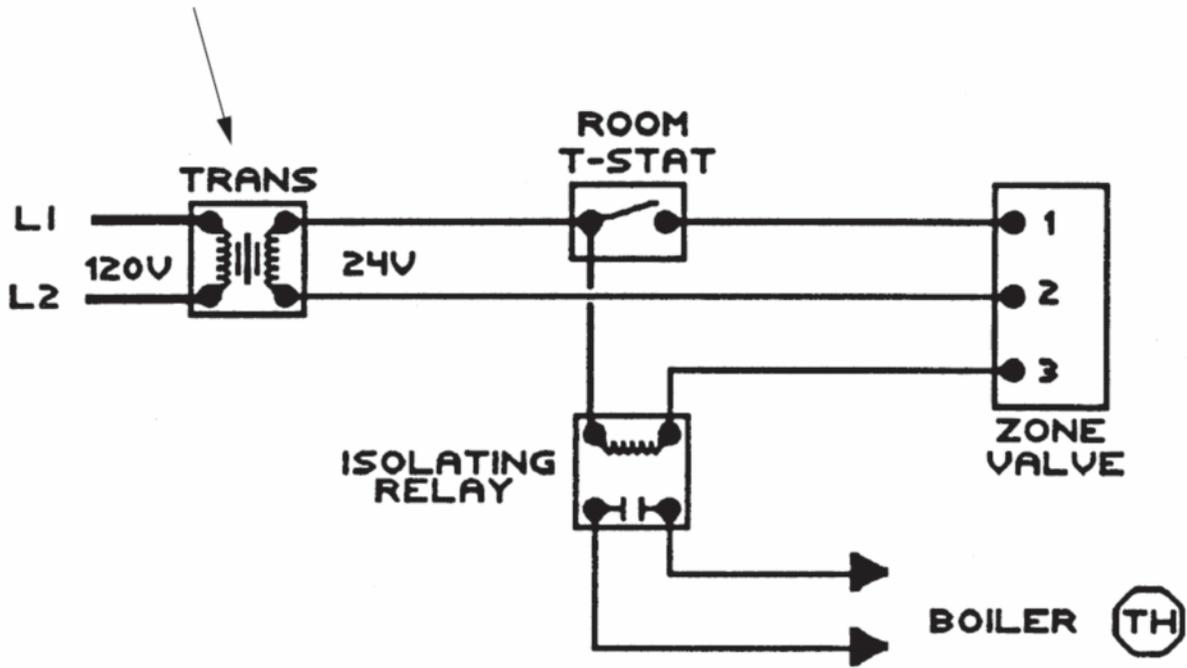


Fig. 19: Single-Zone Taco Valve

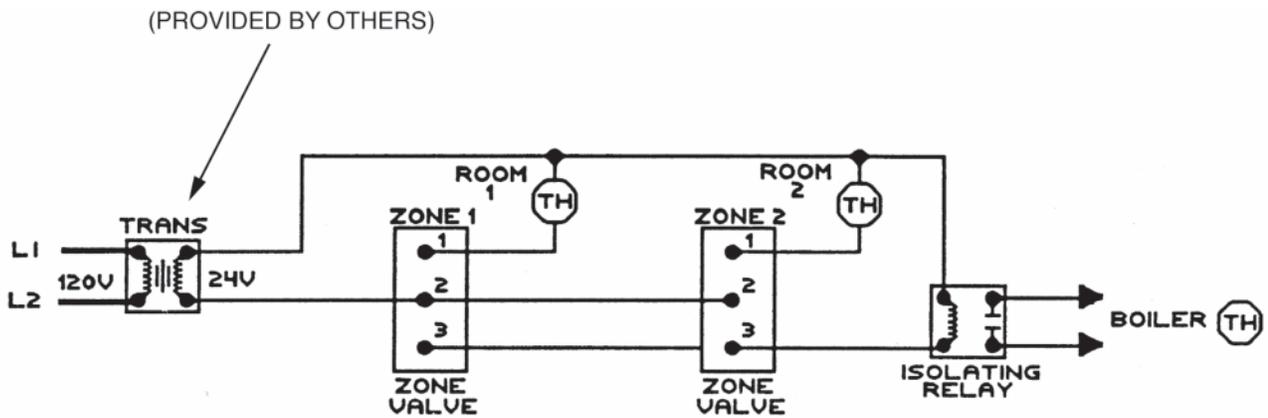


NOTE: Maximum three (3) zone valves per one (1) 40 VA transformer.

Fig. 20: Dual-Zone Taco Valve

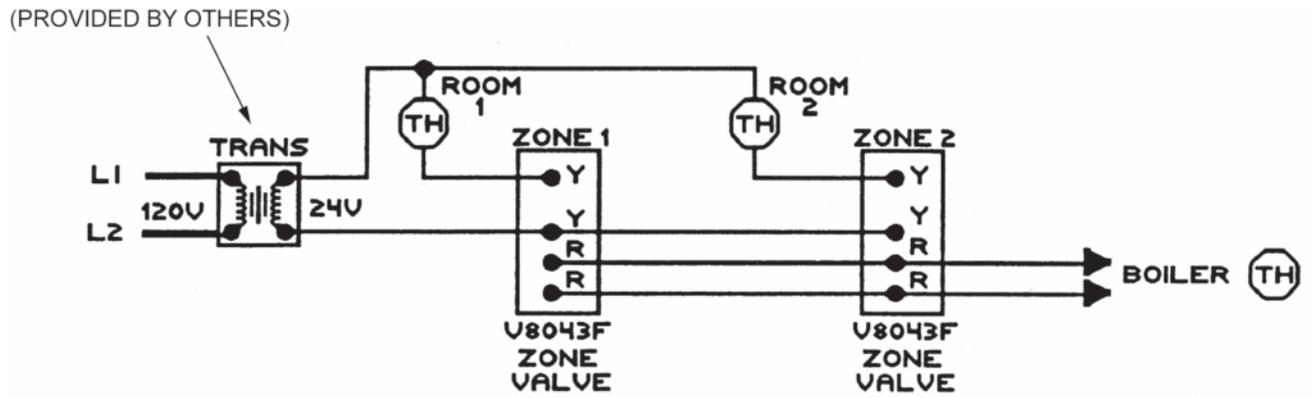

NOTE: Maximum five (5) zone valves per one (1) 40 VA Transformer.

Fig. 21: Dual-Zone Honeywell Valve

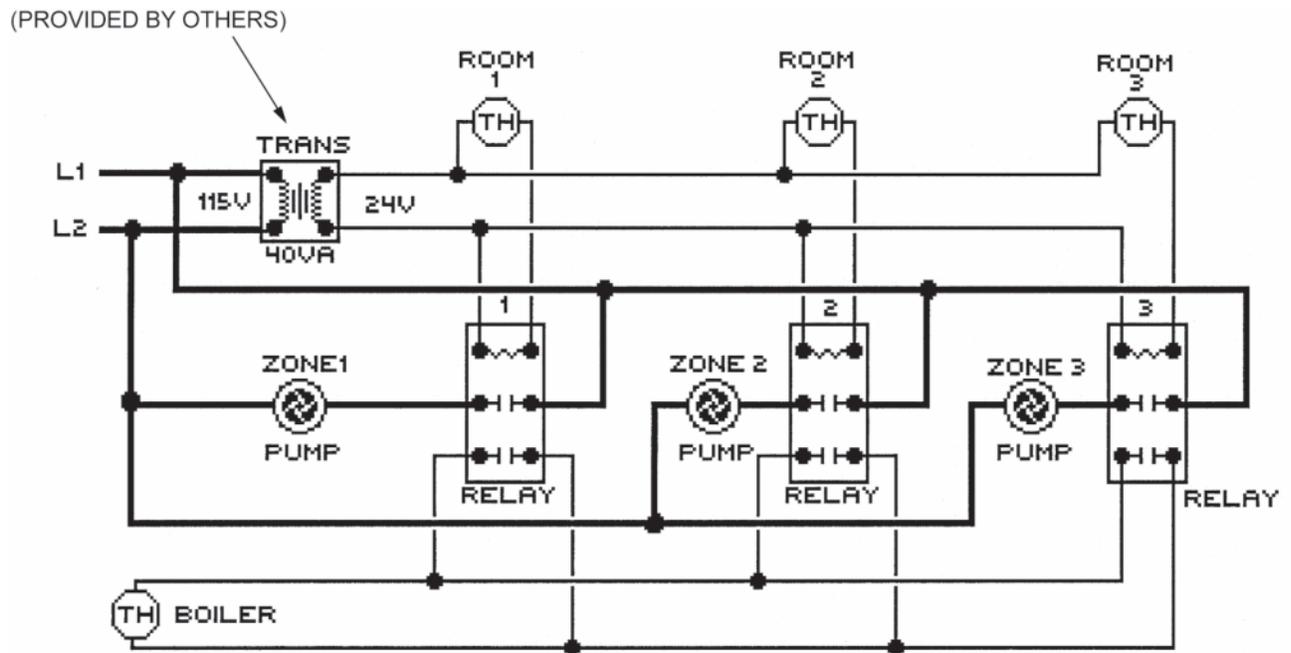

NOTE: Check VA rating of each relay coil. Total load must not exceed VA rating of transformer.

Fig. 22: System with Three (3) Zone Pumps

## Taco Zone Valve

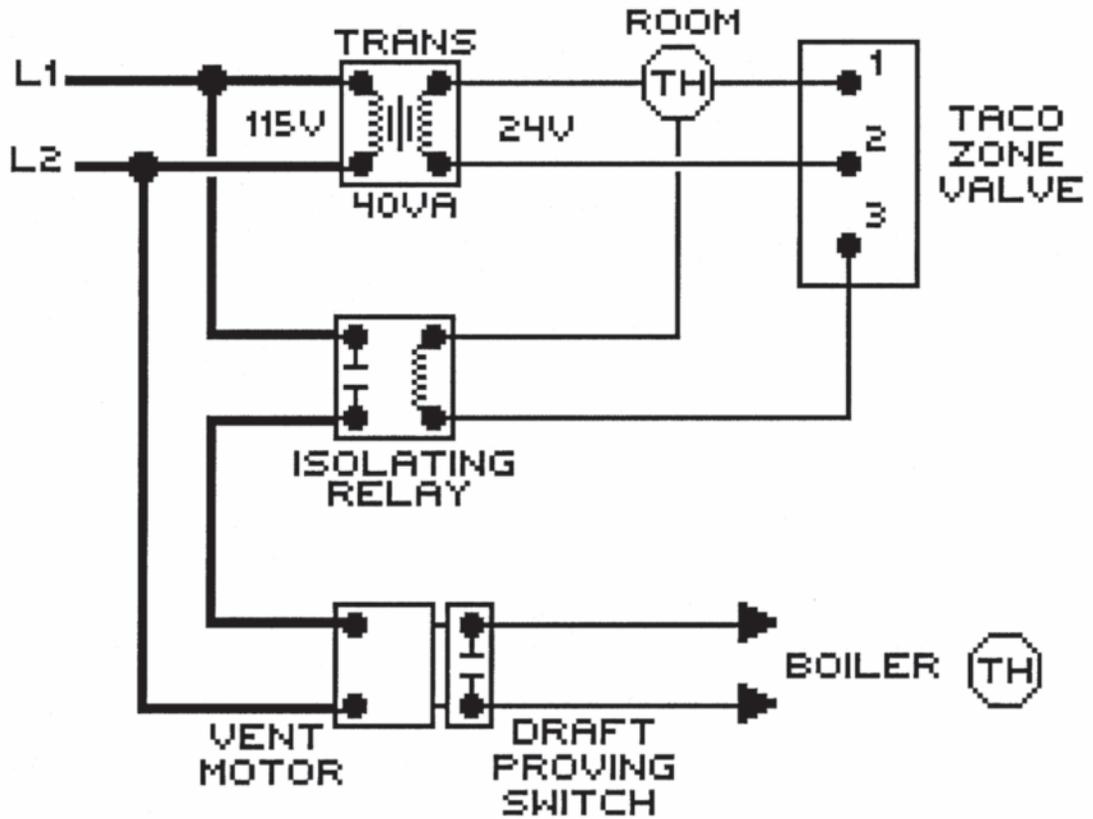


Fig. 23: Power Vent System with Zone Valve (Taco)

## Honeywell Zone Valve


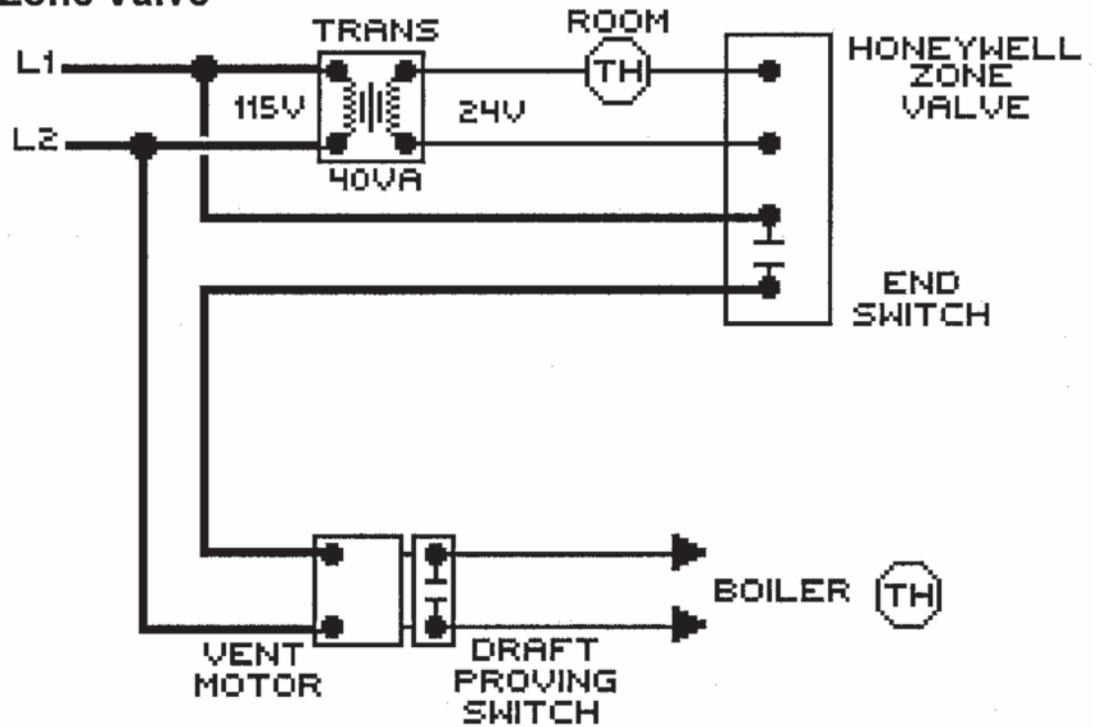



Fig. 24: Power Vent System with Zone Valve (Honeywell)

# SERVICING PROCEDURES

## General Location of Controls

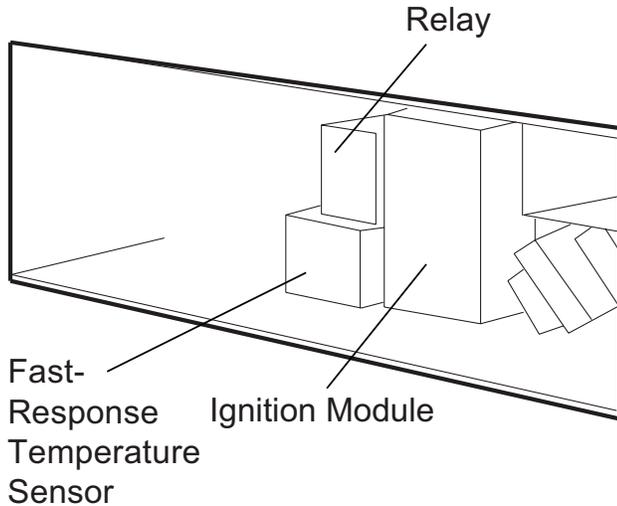

**Fig. 25: Control Box Component Locations Models 0135 & 0180**

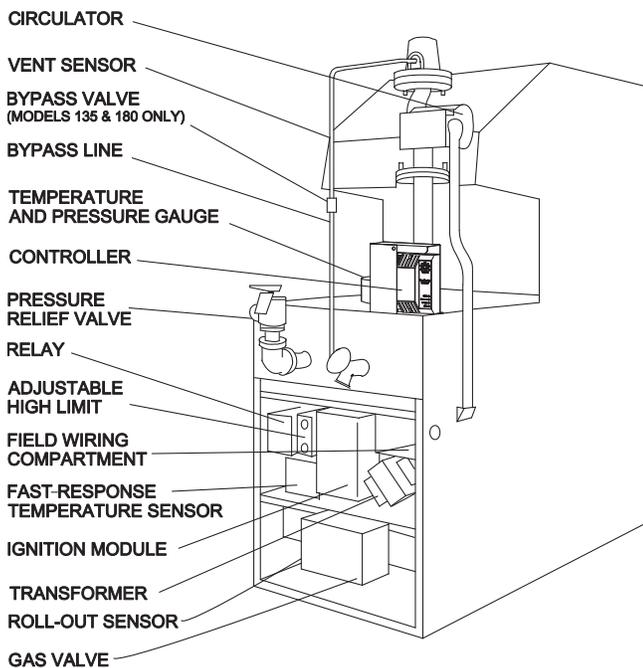

**Fig. 26: Component Locations**

# SEQUENCE OF OPERATION

## Intermittent Ignition Device (IID)

The boiler will automatically light the pilot burner first and then the main burner, each time there is a call for heat from the room thermostat. Whenever the room thermostat is calling for heat, the circulator supplied with the boiler will be energized and should be running.

The ignition control module will also be energized to initiate the pilot ignition by opening the first main valve (pilot). At the same time, the electronic spark generator in the module produces a high-voltage spark output that lights the pilot burner. If the pilot burner does not light, the module will not energize the second main valve and the burners will not light.

Ignition spark continues only until the timed trial for ignition period ends. Then, the module goes into safety shutdown or lockout. Lockout de-energizes the first main valve operator and closes the first main (pilot) valve in the gas control, stopping pilot gas flow. The ignition control system must be reset by setting the thermostat below room temperature for one minute or by turning off power to the module for one minute.

When the pilot flame is established, flame rectification circuit is completed between the sensor and burner ground. The flame sensing circuit in the module detects the flame current, shuts off the spark generator and energizes the second main valve operator which opens the second main valve. This allows gas to flow to the burners where it is ignited by the pilot burner flame.

When the thermostat is satisfied, the valve operators are de-energized shutting off the pilot and main burners, and also the circulator.

---

# START-UP PROCEDURES

## Lighting the Boiler

Safe-lighting and other performance criteria were met with the gas manifold and control assembly provided on the boiler when the boiler underwent tests specified in the latest edition of the ANSI Z21.13/CSA 4.9 Standard.

**CAUTION:** Propane gas is heavier than air and sinks to the ground. Exercise extreme care in lighting boiler in confined areas.

**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

## Filling the System

Flush system before putting into operation to ensure that foreign material does not damage pump seals. Fill system with water. Purge all air from the system using purge valve sequence. After system is purged of air, lower system pressure. Open valves for normal system operation, fill system through feed pressure regulator to minimum 12 psi. Manually open air vent on the compression tank until water appears, then close vent.

On multiple-zone systems, purge each zone separately. Isolate the other zones while one zone is being purged of air.

## Checking the Circulator

Before lighting the boiler and after system is filled, make sure that circulator is operating properly. Manual gas valve should be off. By adjusting the wall thermostat to the maximum setting, circulator should run immediately and allow water to flow through the boiler and the entire system.

**CAUTION:** In case of a prolonged power failure during freezing weather conditions, boiler and piping system must be drained completely to avoid possible damage to the heating system.

**NOTE:** Circulator motor supplied with the boiler does not require lubrication.

## Safety Information

Please read carefully and understand the following safety information before operating the boiler.

**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.


- A. This boiler is equipped with an ignition device which automatically lights the pilot. Do not try to light the pilot by hand; or this boiler may not have a pilot and is equipped with a hot surface ignition device which automatically lights the burners. Do not try to light the burners by hand.
- B. **BEFORE OPERATING** smell all around the boiler area for gas. Be sure to smell next to the floor because some gases are heavier than air and will settle on the floor.

### WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
  - Do not touch any electrical switch.
  - Do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in, move or turn the gas control knob or lever. Never use tools. If the knob or lever will not push in, move or turn by hand don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this boiler if any part has been under water. Immediately call a qualified service technician to inspect the boiler and to replace any part of the control system and any gas control which has been under water.


## Operating the Boiler

1. STOP! Read the previous safety information.
2. Set the thermostat to the lowest setting.
3. Turn off all electrical power to the appliance.
4. This boiler is equipped with an ignition device which automatically lights the pilot. Do not try to light the pilot by hand.

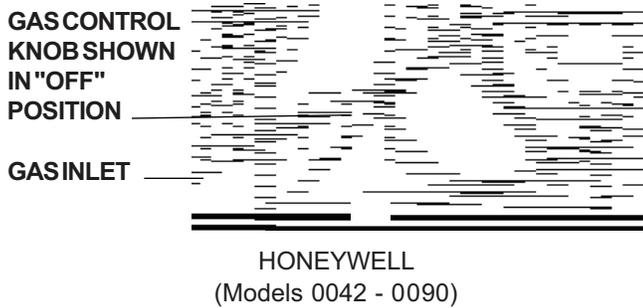

**Fig. 27: Honeywell Gas Valve**

5. **For Honeywell valve:** Turn gas control knob clockwise  to "Off".  
**For Robertshaw valve:** Push in and move gas control lever to "Off" position.
6. Wait 5 minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information on the label affixed to the front of the unit. If you don't smell gas, go to the next step.
7. **For Honeywell valve:** turn gas control counter-clockwise  to "On".  
**For Robertshaw valve:** Move gas control lever to "On" position.

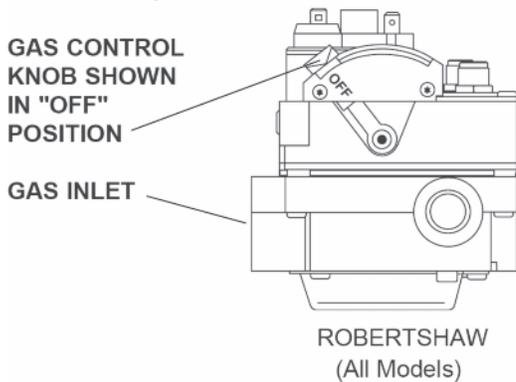


**Fig. 28: Robertshaw Gas Valve**

8. Turn on all electrical power to the boiler.
9. Set thermostat to desired setting.
10. If the boiler will not operate, follow the instructions "To Turn Off Gas To Boiler" and call your service technician or gas supplier.

## To Turn Off Gas to the Boiler

1. Set the thermostat at the lowest setting.
2. Turn off all electrical power to the boiler if service is to be performed.
3. **For Honeywell valve:** Turn gas control knob clockwise  to "Off". Make sure knob rest against stop.  
**For Robertshaw valve:** Push in and move gas control lever to "Off" position.

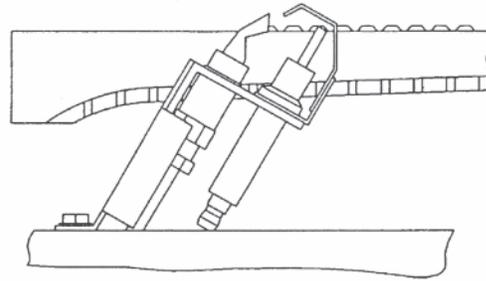

**Fig. 29: Honeywell Pilot**

## Shut-down Procedure

To prevent freeze damage to the heating system, it is recommended that the following system shut-down procedure be performed.

1. Set the room thermostat to "OFF" or the lowest setting.
2. Turn off all electrical switches to the boiler.
3. Turn off all gas valves supplying gas to the boiler. Refer to operating instruction label on the boiler.
4. Shut-off the water supply to the boiler piping system loop.
5. Open drain valve on the boiler to remove water from the boiler and the piping circuits.

**NOTE:** It may be necessary to open the purge valves and/ or manual air vents to facilitate complete drainage of water from the heating system.

**CAUTION:** Should overheating occur or the gas supply fails to shut-off, DO NOT turn off or disconnect the electrical supply to the pump. Instead, shut-off the gas supply at a location external to the boiler. Failure to observe this precaution may aggravate the overheated condition resulting in possible damage to the boiler and injury to the user.

## Testing the Ignition Safety Shut-off

The ignition system safety shut-off must be tested by conducting the following tests:

1. Turn on power to the ignition systems and turn gas supply off at the gas valve.
2. Check ignition module as follows:
  - a. Set the thermostat or controller above room temperature to call for heat.
  - b. Watch for continuous spark at the pilot burner.
  - c. Time the spark operation. Unit will lock out if the pilot does not ignite within 90 seconds.
  - d. Turn thermostat down to end call for heat and wait 60 seconds before beginning step 3.
3. Turn on gas supply.
4. Set thermostat or controller above room temperature to call for heat.
5. Systems should start as follows:
  - a. Spark will turn on and pilot gas valve will open at once. Pilot burner should ignite after gas reaches the pilot burner.
  - b. Spark ignition should cut-off when pilot flame is established.
  - c. Main gas valve should open and main burner should ignite after gas reaches the burner port.

## Safe Shut-down Tests

### Limit Action

With the burner operating, lower the high limit setting to simulate an overheated boiler. Normal shutdown should occur. Restore the normal limit setting, and the burner should restart.

### Flame Failure


With burner operating, close the manual fuel valves to simulate a flame failure. System should lock out within 1 sec. After the safety switch has cooled, open the manual valves and reset the safety switch; the burner should restart.

## Inspection Procedures

### Burners

Clean main burners and air louvers of dust, lint and debris. Keep boiler area clear and free from combustibles and flammable liquids. Do not obstruct the flow of combustion and ventilation air. Make visual

check of burner and pilot flame. Yellow flame indicates clogging of air openings. Lifting or blowing flame indicates high gas pressure. Low flame indicates low gas pressure.

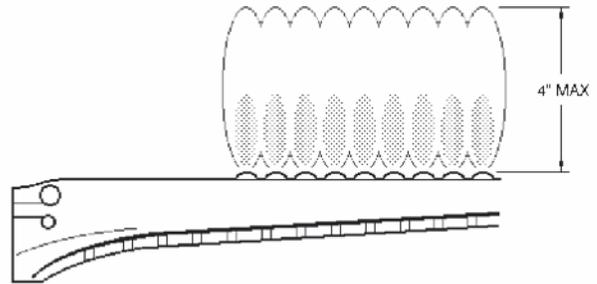

NOTE: Modulating burner flame varies in height from approximately 1/4" at low fire to approximately 4" in high fire.

Fig. 30: Main Burner Flame

## Inspection Schedule

To be performed the first and third month after initial start up and then on an annual basis. If problems are found, refer to Troubleshooting Guide for additional directions.

1. Remove top of boiler and inspect heat exchanger for soot and examine venting system.
2. Remove rear header and inspect for scale deposits.
- \*3. Inspect pilot and main burner flame and firing rate.
- \*4. Inspect and operate all controls and gas valve.
- \*5. Visually inspect system for water leaks.
- \*6. Inspect oil pump motor and bearing assembly, if oil cups are provided.
7. Check flow switch paddle.
8. Clean room air intake openings to ensure adequate flow of combustion and ventilation air.
9. Keep boiler area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.

\*Should be checked monthly. (Takes approximately 15 minutes).

## Procedure for Cleaning Flue Gas Passageways

Soot will clog areas behind fins and eventually cause tube failure. Any sign of soot at base of burners or around outer jacket indicates a need for cleaning.

1. Lift off draft hood and flue collector by removing bolts and screws.

2. Remove "V" baffles from heat exchanger.
3. Remove burner tray, see Burner Tray Removal.
4. Take garden hose and wash heat exchanger, making sure soot is removed from between fins. (Avoid excessive water against refractory).
5. Reassemble; when boiler is fired, some steam will form from wet refractory. This is normal.

**NOTE:** In extreme cases it may be necessary to remove the heat exchanger completely for cleaning. The simplest method is steam cleaning at a local car wash. **DO NOT WIRE BRUSH!**

**CAUTION:** Soot is combustible, so exercise extreme care.

### Burner Tray Removal

1. Shut-off power and gas supply to the boiler. Disconnect union(s) and pilot tubing when present; then loosen and remove burner hold-down screws.
2. Disconnect wires at gas valve and slide burner tray out.

### Main Burner and Orifice Removal

1. Remove screws and burner hold-down bracket.

**NOTE:** If the heat exchanger is sooted badly, the burner hold-down bracket and spacer can become distorted from direct flame impingement and this usually necessitates replacement of these parts.

2. Lift burners from slotted spacer and slide from orifices. Clean with a wire brush.
3. Orifices usually do not need to be replaced. To clean, run either copper wire or wood through orifice. Do not enlarge hole. To remove orifice, use a socket wrench and remove the manifold. **DO NOT** over-tighten when reinstalling.

## REPAIR PROCEDURES

### Tube Cleaning Procedure (Typical)

Establish a regular inspection schedule, the frequency of which depends on the local water condition and severity of service. Do not let the tubes clog up solidly. Clean out deposits over 1/16" in thickness.

To clean the tubes, remove the heat exchanger, ream tubes and immerse heat exchanger in non-inhibited de-scale solvent.

### Heat Exchanger Removal

1. Shut water, gas and electricity off, close valves, relieve pressure and remove relief valve. Remove front inspection panel.
2. Remove top holding screws.
3. Remove draft diverter, lift and remove top and flue collector on stack type models.
4. Loosen bolts and disconnect flange nuts on inlet/outlet header, loosen union(s) at gas pipe, and slide boiler away from piping until studs clear the heater.
5. Lift heat exchanger straight up using caution not to damage refractory.

#### RAYPAK TUBE CLEANING KIT

Extension Pieces (5)	Auger with Carbide Tip	Wire Brush
----------------------	------------------------	------------

5/8" - PN 052871F

Fig. 31: Raypak Tube Cleaning Kit

---

## Heat Exchanger Re-assembly

1. Heat exchanger water header O-rings should be replaced with new ones.
2. Install in/out and return water headers and install header retainer nuts and torque nuts evenly.
3. Replace "V" baffles on top of the heat exchanger.
4. Install thermostat sensing bulbs in header wells and replace bulb retaining clips.
5. Install inlet and return pipes in water headers using pipe thread sealant.
6. Install water pressure relief valve, flow switch, and low water cut-off devices if so equipped.
7. Open water supply and return shut-off valves. Fill boiler and water piping system with water. Check boiler and piping system for leaks at full line pressure. Run system circulating pump for a minimum of 1/2 hour with boiler shut off.
8. Shut down entire system and vent all radiation units and high points in system piping. Check all strainers for debris. Expansion tank water level should be at the 1/4 mark and the balance of the tank filled with air (when using Air-X-Tank).

9. Install flue collector, jacket top and inspection panels. Install top holding screws. Install draft diverter and vent piping if so equipped.
10. If gas piping was disconnected, reconnect gas piping system and check for leakage using a soap solution.
11. Check for correct water pressure and water level in the system. Make sure that system pump operates immediately on the call for heat. The system is ready for operation.
12. Within two (2) days of start-up, recheck all air vents and expansion tank levels.

## Combustion Chamber Removal

To remove combustion chamber panels, you must first remove the heat exchanger. Remove combustion chamber panels individually.

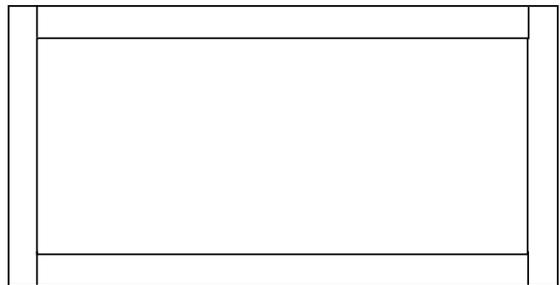


Fig. 32: Combustion Chamber Panels—Top View

## Adjustment & Replacement of Components

**DANGER—SHOCK HAZARD:** Make sure electrical power to the boiler is disconnected to avoid potential serious injury or damage to components.

### Gas Valve Replacement

1. Shut-off electrical power and gas supply to the boiler.
2. Remove gas piping to gas valve inlet.
3. Disconnect wiring connections, pilot tubing (when present).
4. Remove screws (2) holding the burner tray.
5. Slide burner tray out.
6. Remove gas valve bracket screws and bracket.
7. Unscrew gas valve from gas pipe.
8. Reverse above procedure to re-install.

### Gas Valve Adjustment - Robertshaw (Invensys) 7000 Series 2-Stage Gas Valve with Solenoid Valve

**NOTE:** Attach a manometer and check the manifold pressures –both high fire and low fire– before making any adjustments.

1. Turn the heater off.
2. Remove the 3/8" nut or the #10 Torx screw.
3. Lift solenoid valve up, keeping the wires connected to the solenoid valve.
4. If only low fire adjustment is needed, go to Step 9.
5. Using a 3/8" wrench, carefully remove the aluminum cap that was under the solenoid valve-count # of turns when removing the cap. Be careful not to drop the cylinder (weight) or the small spring that is under the cap –see Fig. 33.
6. Remove the spring and store in a safe place.
7. Using an Allen wrench, turn the screw clockwise to increase or counterclockwise to decrease high fire manifold pressure –see Fig. 33.
8. Install the spring, weight and aluminum cap –tighten the cap using same # of turns as was used in removing the cap.
9. For low fire adjustment, tighten the aluminum cap to increase and loosen to decrease low fire manifold pressure.
10. Install 2-stage solenoid valve and turn heater on, check manifold pressures.
11. Repeat steps 3 to 10 until correct manifold pressures are obtained.
12. Secure 2-stage solenoid valve by tightening the 3/8" nut or #10 Torx screw.

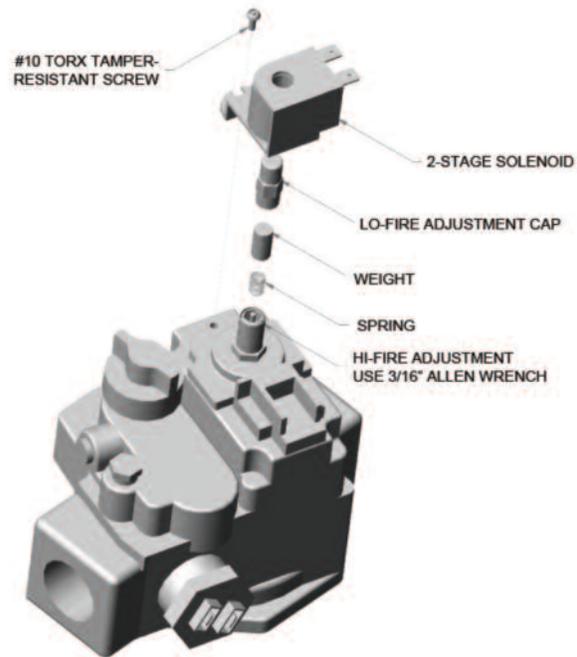


Fig. 33: 2-Stage Gas Valve Adjustment (Invensys)

### Flame Roll-out Switch Replacement

1. Shut-off electrical power to the boiler.
2. Remove wiring connections to switch.
3. Remove screws (2) holding the switch.
4. Reverse above procedure to re-install.

### Vent Thermal Switch Replacement

1. Shut-off electrical power to the boiler.
2. Remove wiring connections to switch.
3. Remove the screws (2).
4. Reverse above procedure to re-install.

### Ignition Module Replacement

1. Shut-off electrical power to the boiler.
2. Remove control cover screws and open control compartment.
3. Disconnect wiring connections to module.
4. Remove screws (2) holding module.
5. Reverse above procedure to re-install.

### Transformer Replacement

1. Shut-off electrical power to the boiler.
2. Remove control cover screws and open control compartment.
3. Disconnect wiring connections from transformer leads.
4. Remove screws (2) holding transformer.
5. Reverse above procedure to re-install.

---

## Pump Relay Replacement

1. Shut-off electrical power to the boiler.
2. Remove control cover screws and open control compartment.
3. Disconnect wiring to the relay.
4. Remove screws (2) holding relay.
5. Reverse above procedure to re-install.

## High Limit Control

1. Shut-off electrical power to the boiler.
2. Remove control cover screws and open control compartment.
3. The control is factory set at 180°F. To adjust setting, use a small screw driver and turn dial clockwise to lower the temperature or counter-clockwise to raise the setting.
4. To replace the limit control, disconnect the wiring connections.
5. Remove screws (2) holding the limit control.
6. Remove upper access panel.
7. Remove the wedge or retaining clip holding the sensing bulb in the control well in the in/out header.
8. Pull out the sensing bulb carefully from the control well.
9. Remove the limit control with capillary from unit.
10. Reverse above procedure to re-install.

## Fast-Response Temperature Sensor Module Replacement

1. Shut-off electrical power to the boiler.
2. Remove control cover screws and open control compartment.
3. Disconnect wiring to the board.
4. Carefully pull out the control board from the nylon pin supports.  
Reverse above procedure to re-install.

## Fast-Response Temperature Sensor Probe Replacement

1. Shut-off electrical power to the boiler.
2. Shut-off water supply to the boiler and open drain valve to remove water to the sensor probe level.
3. Remove control cover screws and open control compartment.
4. Disconnect wire leads from control board.
5. Remove upper access panel.
6. Remove sensor probe from in/out header.
7. Reverse above procedure to re-install.

## Circulator Replacement

1. Shut-off electrical power to the boiler.
2. Shut-off water supply and open drain valve to remove water in the piping at the pump level.

**CAUTION:** To avoid damage to electrical components, keep water from getting into the control compartments and gas valve.

3. Disconnect wiring and conduit connections to the pump.
4. Disconnect the bypass tube connections to the inlet flange.
5. Remove the nuts and bolts at the inlet and outlet flanges. Remove old gaskets.
6. Remove the pump.
7. Reverse the above procedure to re-install. Use new gaskets and make sure they are seated properly when tightening the nuts and bolts.

## Replacement Parts List

**(see Raypak Catalog No. 9300.9.1, located in the Document Library at [www.raypak.com](http://www.raypak.com))**

**NOTE:** To supply the correct part it is important that you supply the model number, serial number and type of gas when applicable.

Any part returned for replacement under standard company warranties must be properly tagged with Raypak return parts tag, completely filled in with the heater serial number, model number etc., and shipped to Raypak freight prepaid.

If determined defective by Raypak and within warranty, the part will be returned in kind or equal substitution, freight collect. Credit will not be issued.

**RAYPAK, INC.**  
2151 Eastman Avenue  
Oxnard, CA 93030

**LIMITED WARRANTY  
RESIDENTIAL - TYPE H  
Models: 42B - 180B**

**SCOPE**

Raypak, Inc. (Raypak) warrants to the original owner that all parts of this heater which are actually manufactured by Raypak will be free from defects in materials and workmanship under normal use and service for the specified warranty periods and subject to the conditions set forth in this Limited Warranty. Labor charges and other costs for parts removal or reinstallation, shipping and transportation are not covered by this Limited Warranty, but are the owner's responsibility.

**EFFECTIVE DATE**

The Effective Date of this Limited Warranty is the date of original installation if properly documented; if you are not able to provide documentary proof of the date of original installation, the Effective Date will be the date of manufacture plus 30 days.

**HEAT EXCHANGER WARRANTY PERIODS**

For ten (10) years after Effective Date, Raypak warrants that the copper and cast iron waterway are free from defects in material and workmanship. Eleventh through twentieth years after Effective Date, Raypak warrants that the copper and cast iron waterway are free from defects in material and workmanship. If any of these parts are found defective Raypak will replace the original parts, and payment of a proportionate charge equal to 1/120<sup>th</sup> of the list price of such parts, at the time the warranty claim is made, for each month, or portion thereof, beyond the tenth year, subject to the terms and conditions of this Limited Warranty.

Thermal Shock Limited Warranty

Twenty five (25) years from Effective Date against "Thermal Shock" (excluded, however, if caused by heater operation at large changes exceeding 150°F between the water temperature at intake and heater temperature, or operating at heater temperatures exceeding 230°F).

**ANY OTHER PART MANUFACTURED BY RAYPAK**

One (1) year from Effective Date.

THIS LIMITED WARRANTY WILL BE VOID IF THE HEATER RATING PLATE IS ALTERED OR REMOVED.

**ADDITIONAL WARRANTY EXCLUSIONS**

This Limited Warranty does **NOT** cover units moved from their original installation location or conditions including failures or malfunctions resulting from:

1. Failure to properly install, operate or maintain the heater in accordance with our printed instructions provided;
2. Abuse, misuse, alteration, accident, fire, flood and the like;
3. Sediment or lime build-up, freezing, or other conditions causing inadequate water circulation;
4. High velocity flow exceeding heater design rates;
5. Failure of connected systems devices, such as pump or controller;
6. Use of non-factory authorized accessories or other components in conjunction with the heater system;
7. Failing to eliminate air from, or replenish water in, the connected water system;
8. Chemical contamination of combustion air;
9. Boilers installed in buildings other than one- or two-family dwellings.

**REPAIR OR REPLACEMENT**

At its option, Raypak will repair or replace a defective part(s) in accordance with the terms of this Limited Warranty, if it fails in normal use and service during its specified warranty period. The failed part must first be returned to Raypak if requested, with transportation charges prepaid, and all applicable warranty conditions found satisfied. The repair or replacement part will be warranted for only the unexpired portion of the original Limited Warranty. Raypak makes no warranty whatsoever on parts not manufactured by it, but Raypak will apply any such warranty as may be provided to it by the parts manufacturer.

**HOW TO MAKE A WARRANTY CLAIM**

You should immediately notify the original installer, supplying the model number and serial numbers of the unit, date of installation and description of the problem. The installer must then notify his Raypak distributor for instructions regarding the claim. If either is not available please contact Service Manager, Raypak, Inc. 2151 Eastman Avenue, Oxnard CA 93030 or call (805) 278-5300. In all cases proper authorization must first be received from Raypak before repair or replacement of any part.

**EXCLUSIVE WARRANTY-LIMITATION OF LIABILITY**

The Limited Warranty is the only warranty for this product and its component parts given by Raypak. No one is authorized to make any other warranties on Raypak's behalf. **ANY IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL NOT EXTEND BEYOND THE APPLICABLE WARRANTY PERIODS SPECIFIED IN THIS LIMITED WARRANTY. RAYPAK'S SOLE LIABILITY WITH RESPECT TO ANY DEFECT SHALL BE AS SET FORTH IN THIS LIMITED WARRANTY. IT IS AGREED THAT RAYPAK SHALL HAVE NO LIABILITY WHETHER UNDER THIS LIMITED WARRANTY OR IN CONTRACT, TORT OR NEGLIGENCE OR OTHERWISE FOR CLAIMS FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING NO LIABILITY FOR DAMAGE FROM WATER LEAKAGE) WHICH ARE EXPRESSLY EXCLUDED, NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.** Some states do not allow limitations on how long an implied warranty lasts, or for the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. **THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.** We suggest you immediately record the model and serial number and date of original installation and retain this Limited Warranty Certificate along with your original proof of purchase and date of installation/start-up in the event warranty service is needed.

**DO NOT RETURN THIS DOCUMENT TO RAYPAK. KEEP IT WITH YOUR HEATER OR BUSINESS RECORDS.**

Name of Owner	Telephone Number of Installer
Owners Address	Name of Owner
Date of Installation	Installation Site
Model Number	Serial Number



**[www.raypak.com](http://www.raypak.com)**

Raypak, Inc., 2151 Eastman Avenue, Oxnard, CA 93030 (805) 278-5300 Fax (805) 278-5468  
Litho in U.S.A.